# Conext™ XWInverter/Charger

Conext XW+ 8548 E Conext XW+ 7048 E

# Installation Guide

975-0714-01-01 Rev E November 2017





# Conext™ XWInverter/Charger

Installation Guide



Copyright © 2007-2017 Schneider Electric. All Rights Reserved.

All trademarks are owned by Schneider Electric Industries SAS or its affiliated companies.

# **Exclusion for Documentation**

UNLESS SPECIFICALLY AGREED TO IN WRITING, SELLER

- (A) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION;
- (B) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK; AND
- (C) REMINDS YOU THAT IF THIS MANUAL IS IN ANY LANGUAGE OTHER THAN ENGLISH, ALTHOUGH STEPS HAVE BEEN TAKEN TO MAINTAIN THE ACCURACY OF THE TRANSLATION, THE ACCURACY CANNOT BE GUARANTEED. APPROVED CONTENT IS CONTAINED WITH THE ENGLISH LANGUAGE VERSION WHICH IS POSTED AT HTTP://SOLAR.SCHNEIDER-ELECTRIC.COM.

#### **Date and Revision**

November 2017 Rev E

#### **Document Part Number**

975-0714-01-01

# **Product Part Numbers**

Product Part Numbers	Related Product Part Numbers
865-8548-61 – Conext XW+ 8548 E	865-1014-01 - Conext XW+ Power Distribution Panel (without breakers)
865-7048-61 – Conext XW+ 7048 E	865-1025 – Conext XW+ Conduit Box
	865-1020-02 - Conext XW+ Connection Kit for INV2 INV3 PDF
	865-1030-1 - Conext MPPT 60 150 Solar Charge Controller
	865-1032 - Conext MPPT 80 600 Solar Charge Controller
	865-1050-01 - Conext System Control Panel
	865-1060-01 - Conext Automatic Generator Start
	865-1058-01 - Conext ComBox
	865-1031-01 – Battery Fuse Disconnect Box (250A)
	865-1030-01 – Battery Fuse Disconnect Box (160A)

#### **Contact Information**

http://solar.schneider-electric.com

Please contact your local Schneider Electric Sales Representative or visit our website at: http://solar.schneider-electric.com/tech-support/

#### Information About Your System

As soon as			_14		£ = 11 =!.= =.				l		£	
Ac coon ac i	VALLANAN '	Valir pro	alict re	CORO IDA	TOHOWIDO	Intormation	and ne	S CLIPA TO	KAAN	vaiir i	nroot ot	nurchaea
/ 13 30011 a3	you open	your pro	auci, ic	COI G LIIC	IOIIOVVIIIQ	II II OI I I I I I I I I I I I I I I I		, Sui C to	$\mathcal{L}$	y Oui		pui di lasc.

Serial Number	
Product Number	
Purchased From	
Purchase Date	

# **About This Guide**

# **Purpose**

The purpose of this Installation Guide is to provide explanations and procedures for installing the Schneider Electric Conext XW+ Inverter/Charger.

# Scope

The Guide provides safety guidelines, detailed planning, and procedures for installing the Conext XW+ Inverter/Charger and related system components. It does not provide details about configuration, operation, maintenance, or troubleshooting. See the Operation Guide or Owner's Guide of each device for this information. This Guide does not provide details about particular brands of batteries, photoelectric cells, or generators. Consult individual battery manufacturers for this information.

# **Audience**

This Installation Guide is intended for any qualified personnel planning to install the Conext XW+ Inverter/Charger and related system components. Certain configuration tasks should only be performed by qualified personnel in consultation with your local utility and/or an authorized dealer. Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. Keep unqualified personnel away from batteries. Servicing of batteries must only be performed or supervised by qualified personnel with knowledge of batteries and their required precautions. Qualified personnel have training, knowledge, and experience in:

- Installing electrical equipment
- Applying applicable installation codes
- Analyzing and reducing the hazards involved in performing electrical work
- Installing and configuring batteries
- Selecting and using Personal Protective Equipment (PPE)

No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

# Organization

This Guide is organized into five chapters and one appendix.

Chapter 1, "Introduction" lists and describes the components and basic features of the Conext XW+ Inverter/Charger.

Chapter 2, "Pre-Installation and Wall-Mounting" describes the pre-installation steps, and gives instructions for wall-mounting the Conext XW+ and Conext XW+ Conduit Box.

Chapter 3, "Wiring the Conext XW+ Inverter/Charger" describes procedures for installing the Conext XW+ Inverter/Charger.

Chapter 4, "Xanbus Network Installation" provides detailed information for planning and installing the components necessary for network communication on a Xanbus system.

Chapter 5, "Conext XW+ Inverter/Charger Accessories Installation" provides detailed instructions for installing certain accessories for your Conext XW+ Inverter/Charger.

Appendix A, "Specifications" provides the electrical and mechanical specifications for the Conext XW+ Inverter/Charger.

#### **Conventions Used**

The following conventions are used in this Guide.

# **Abbreviations and Acronyms**

GT	Grid Tie
LCD	Liquid Crystal Display
LED	Light Emitting Diode
MPPT	Maximum Power Point Tracking
PV	Photovoltaic
PVGFP	PV Ground Fault Protection
IEC	International Electrotechnical Commission
VAC	Volts AC
VDC	Volts DC

# **Related Information**

For information about operating the Conext XW+ Inverter/Charger, see the Conext XW+ Inverter/Charger Owner's Guide

You can find more information about Schneider Electric as well as its products and services at http://solar.schneider-electric.com.

For available accessories, see "Optional Accessories" on page 1-4.

# Important Safety Instructions

# READ AND SAVE THESE INSTRUCTIONS - DO NOT DISCARD

This guide contains important safety instructions for the Conext XW+ Inverter/ Charger that must be followed during installation procedures. **Read and keep this Installation Guide for future reference.** 

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a "Danger" or "Warning" safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

# A A DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

# **WARNING**

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

# **A** CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

### NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this signal word.

# Safety Information

- 1. Before using the inverter, read all instructions and cautionary markings on the unit, the batteries, and all appropriate sections of this manual.
- 2. Use of accessories not recommended or sold by the manufacturer may result in a risk of fire, electric shock, or injury to persons.
- 3. The inverter is designed to be permanently connected to your AC and DC electrical systems. The manufacturer recommends that all wiring be done by a certified technician or electrician to ensure adherence to the local and national electrical codes applicable in your jurisdiction.
- 4. To avoid a risk of fire and electric shock, make sure that existing wiring is in good condition and that wire is not undersized. Do not operate the inverter with damaged or substandard wiring.
- 5. Do not operate the inverter if it has been damaged in any way.
- 6. This unit does not have any user-serviceable parts. Do not disassemble the inverter except where noted for connecting wiring and cabling. See your warranty for instructions on obtaining service. Attempting to service the unit yourself may result in a risk of electrical shock or fire. Internal capacitors remain charged after all power is disconnected.
- To reduce the risk of electrical shock, disconnect both AC and DC power from the inverter before attempting any maintenance or cleaning or working on any components connected to the inverter. Putting the unit in Standby mode will not reduce this risk.
- 8. The inverter must be provided with an equipment-grounding conductor connected to the AC input ground.
- 9. Do not expose this unit to rain, snow, or liquids of any type. This product is designed for indoor use only. Damp environments will significantly shorten the life of this product and corrosion caused by dampness will not be covered by the product warranty.
- 10. To reduce the chance of short-circuits, always use insulated tools when installing or working with this equipment.
- 11. Remove personal metal items such as rings, bracelets, necklaces, and watches when working with electrical equipment.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Disconnect positive and negative PV conductors before servicing. PV conductors are to be treated as Hazardous Live and must be disconnected.
- Normally GROUNDED conductors may be UNGROUNDED and ENERGIZED when a GROUND FAULT is indicated on the front panel. Must be serviced by qualified personnel.

Failure to follow these instructions will result in death or serious injury.

975-0714-01-01 vii

# **Precautions When Working With Batteries**

**Note:** Battery work and maintenance must be done by qualified personnel knowledgeable about batteries to ensure compliance with battery handling and maintenance safety precautions.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable about batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Do not dispose of batteries in a fire. The batteries may explode.
- When replacing batteries, replace with the same type and number of batteries or battery packs.
- Do not open or damage batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
- Remove watches, rings, or other metal objects.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.
- Determine if the battery is inadvertently grounded. If inadvertently
  grounded, remove source from the ground. Contact with any part of a
  grounded battery can result in electrical shock. The likelihood of such a
  shock can be reduced if such grounds are removed during installation and
  maintenance.

Failure to follow these instructions will result in death or serious injury.

# Limitations on Use

# **AWARNING**

# **LIMITATIONS ON USE**

The Conext XW+ Inverter/Charger is not intended for use in connection with life support systems or other medical equipment or devices.

Failure to follow these instructions can result in death or serious injury.

975-0714-01-01 ix

# **Explosive Gas Precautions**

# **A** A DANGER

# **IGNITION HAZARD**

- This equipment is not ignition protected. To prevent fire or explosion, do not
  install this product in locations that require ignition-protected equipment.
  This includes any confined space containing vented batteries, or
  flammable chemicals such as, natural gas (NG), liquid petroleum gas
  (LPG) or gasoline (Benzine/Petrol).
- Do not install in a confined space with machinery powered by flammable chemicals, or storage tanks, fittings, or other connections between components of fuel or flammable chemical systems.

Failure to follow these instructions will result in death or serious injury.

To reduce the risk of battery explosion, follow these instructions and those published by the battery manufacturer and the manufacturer of the equipment in which the battery is installed.

975-0714-01-01 xi

•THIS PAGE INTENTIONALLY BLANK•

# Contents

# Important Safety Instructions

1	Introduction	
	Overview	1–2
	Inside the Box	1–2
	Conext XW+ Inverter/Charger and System Components	1–2
	Battery Temperature Sensor	1–2
	Conext XW+ Features	1–3
	Optional Accessories	1-4
	Conext XW+ Conduit Box	1–4
	Conext XW+ Power Distribution Panel	1–4
	Conext XW+ Connection Kit for INV2 INV3 PDP	1–6
	Conext MPPT 60 150 Solar Charge Controller	1–7
	Conext MPPT 80 600 Solar Charge Controller	1–7
	Conext System Control Panel	1–8
	Conext Automatic Generator Start	1–8
	Conext ComBox	1_S
	Conext Battery Monitor	1–9
	Battery Fuse Disconnect Box (250A)	1_S
	Battery Fuse Disconnect Box (160A)	1–10
2	Pre-Installation and Wall-Mounting	
	Pre-Installation	
	Planning the Installation	
	Installation Tools and Materials	
	Location	
	Clearance Requirements	
	Knockout Selection	
	Air Filter and AUX Port Connector Installation	
	Wall-Mounting	
	Installing the Mounting Plate	
	Wall-Mounting the Conext XW+	
	Installing the Conext XW+ Conduit Box	
	Communications Network Preparation	
	Battery Bank Preparation	
	Battery Bank Requirements	
	Battery Cable Requirements	
	Torque Values	
	Torque values for the Conext XW+ Inverter/Charger	
	Torque Values for the Conext XW+ Power Distribution Panel	2–16

3	Wiring the Conext XW+ Inverter/Charger	
	Removing the AC Access Panel and PDP Internal Faceplates	3–2
	AC Access Panel Removal	
	Communication Ports and BTS Port	3–4
	AUX Port	3–4
	AUX+12V Voltage Supply	3–5
	AUX-RPO: User Remote Power OFF (RPO)	
	User Line Wiring	
	AUX Port Terminal Assignments	3–6
	Wiring the Conext XW+ Inverter/Charger without a PDP	
	Conext XW+ Inverter/Charger Grounding	
	Grounding the DC System	3–7
	Battery Temperature Sensor Installation	3–9
	Making DC Connections without a PDP	
	Battery Cables and Battery Terminals	
	Making AC Connections	
	AC Terminal Block	3–18
	AC Equipment Grounding	3–20
	AC System Bonding	
	AC wiring the Conext XW+ Inverter/Charger to the Inverter Load Sub-Panel	
	AC wiring additional Conext XW+ Inverter/Chargers without a PDP	
	Basic Functional Test – Single Inverter	
	Confirming All Connections	
	Applying DC Power to the Inverter	3–29
	Enabling the Inverter	
	AC Voltage Check	
	Confirming Battery Charger Operation	
	Basic Functional Test - Multiple Inverters	
	Wiring the Conext XW+ Inverter/Charger with a PDP	
	Pre-Installation Steps	3–38
	Conext XW+ Power Distribution Panel Internal Faceplate Removal	
	Conext XW+ Inverter/Charger Grounding	
	Making DC Connections with a PDP	
	Battery Cables and Battery Terminals	
	DC Grounding	
	Single Inverter/Charger DC Connections	
	Dual Inverter/Charger DC Connections	
	DC Grounding	
	DC positive bus bar installation	
	DC Wiring for a Dual-Inverter System	
	Triple Inverter/Charger DC Connections	
	DC Grounding	
	DC Positive Bus Bar installation	
	DC Wiring for a Triple-Inverter System	
	AC Wiring with a Conext XW+ Power Distribution Panel	
	AC equipment grounding	

	AC breaker installationAC Wiring with a PDP	
	S .	
4	Xanbus Network Installation	
	The Xanbus Network	
	Network Components	
	Xanbus-enabled devices	
	Xanbus power supply	
	Xanbus cables	
	Network terminators	
	Installing the Network	
	Before You Begin the Installation	
	Installation Tools and Materials	
	Installing AC sync and Xanbus cables	
	Guidelines for Routing the Xanbus Cables	4–7
5	Conext XW+ Inverter/Charger Accessories Installation	
	Conext Combox Installation	5–2
	Conext System Control Panel Installation	
	Installing the SCP via the Xanbus Network	
	Replacing the Inverter Information Panel with the SCP	
	Verifying the Installation	5–7
Sr	pecifications	
υp	Electrical Specifications	Δ_2
	Conext XW+ Overload Capability	
	Output Power Versus Ambient Temperature	
	Conext XW+ Efficiency	
	Inverting Efficiency (Typical)	
	Charging Efficiency (Typical)	
	Charging Efficiency Power Factor	
	Mechanical Specifications	
	Accessories	
	Regulatory Approvals	
	negulatory Approvals	A-8

# Introduction

Chapter 1, "Introduction" lists and describes the components and basic features of the Conext XW+ Inverter/Charger.

Topics in this chapter include:

- "Overview" on page 1–2
- "Inside the Box" on page 1-2
- "Conext XW+ Features" on page 1–3
- "Optional Accessories" on page 1–4

# Overview

The Conext XW+ is a modular building block sine-wave inverter/charger that can be used for residential and commercial battery based off-grid, grid backup, and grid interactive applications.

The Conext XW+ is a self-contained DC to AC inverter, battery charger, and integrated AC transfer switch. It is configurable in a hybrid system to operate with generators and renewable energy sources. These configurations are capable of extending battery based off-grid/backup autonomy.

# Inside the Box

# Conext XW+ Inverter/Charger and System Components

The following system components are included in this package. If any items are missing, contact your authorized dealer.

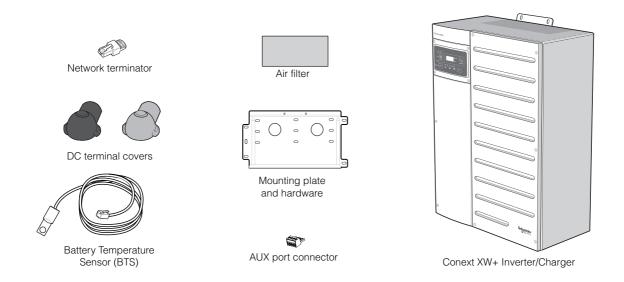



Figure 1-1 Conext XW+ Inverter/Charger and System Components

# **Battery Temperature Sensor**

The Battery Temperature Sensor (BTS) included in this package monitors the temperature of the battery bank and adjusts the charging accordingly. For installation instructions, see "Battery Temperature Sensor Installation" on page 3–9 of this Guide.

1-2

# Conext XW+ Features

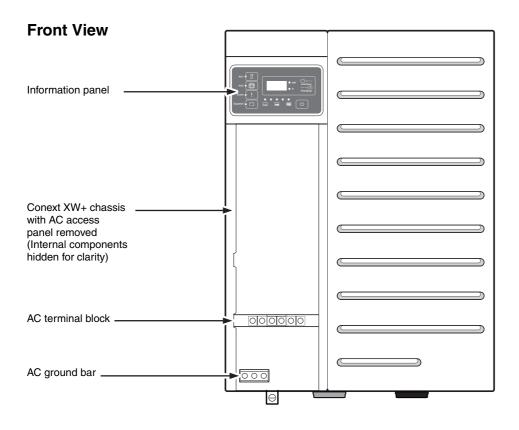

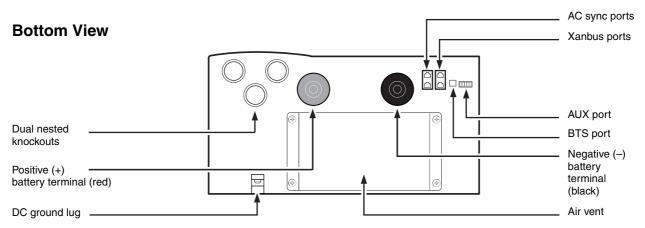


Figure 1-2 Conext XW+ Inverter/Charger Features

975-0714-01-01

# **Optional Accessories**

The following optional accessories are available for the Conext XW+ Inverter/ Charger.

For an up-to-date list, call an authorized dealer or visit **http://solar.schneider-electric.com**.

# Conext XW+ Conduit Box

Part Number 865-1025-01

The Conext XW+ Conduit Box provides an enclosure over the bottom of the Conext XW+ and covers the cabling that runs underneath.

For installation instructions, see "Installing the Conext XW+ Conduit Box" on page 2–10 of this Guide.



Figure 1-3 Conext XW+ Conduit Box

**Note:** Your installation may require the inclusion of the Conext XW+ Conduit Box, depending on local electrical code. Consult your local electrical authority to ensure your installation is code-compliant.

# Conext XW+ Power Distribution Panel

Part Number 865-1014-01

The Conext XW+ Power Distribution Panel (PDP) is factory wired and labelled to support a single-inverter installation. The PDP does not include AC breakers. For more information, contact your local Schneider Electric Sales Representative.

**Note:** The Conext XW+ Power Distribution Panel may not be available in all regions; installation is dependent upon your local electrical code. Consult your local electrical authority to ensure your installation is code-compliant.

The PDP interfaces with the following Conext products:

- Conext XW+ 7048 E and Conext XW+ 8548 E Inverter/Chargers
- Conext MPPT Solar Charge Controllers (breakers and wiring not included)
- C-Series Charge Controllers (breakers and wiring not included).

The Conext XW+ Power Distribution Panel includes the components shown below.

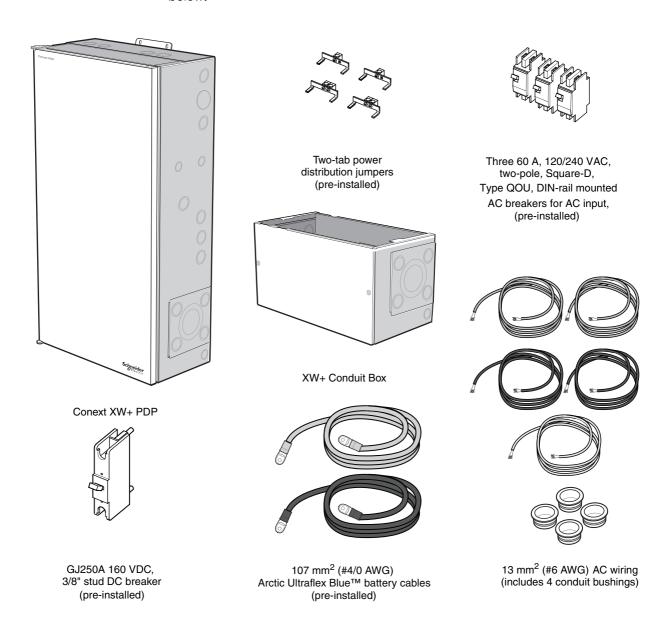


Figure 1-4 Conext XW+ Power Distribution Panel with Conduit Box

#### Not shown:

- One ground terminal bus bar
- One neutral terminal bus bar
- One battery negative terminal bus bar
- Zap-strap cable ties (3x)

975-0714-01-01 1–5

# Conext XW+ Connection Kit for INV2 INV3 PDP

Part Number 865-1020-02

The Conext XW+ Connection Kit is the extension kit for connecting a second or third Conext XW+ Inverter/Charger in the same system.

The Conext XW+ Connection Kit includes the components shown below.

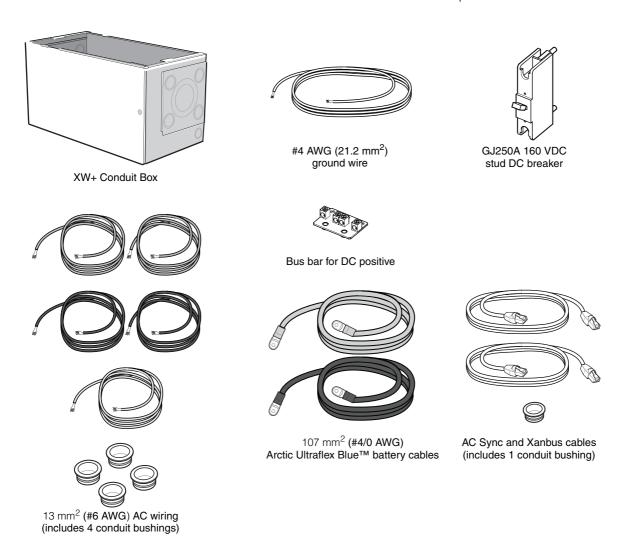


Figure 1-5 Conext XW+ Connection Kit

# Conext MPPT 60 150 Solar Charge Controller

Part Number 865-1030-1

The MPPT 60 150 Solar Charge Controller is a photovoltaic (PV) charge controller that tracks the maximum power point of a PV array to deliver the maximum available current for charging batteries.

For more information, go to http://solar.schneider-electric.com.



Figure 1-6 Conext MPPT 60 150 Solar Charge Controller

# Conext MPPT 80 600 Solar Charge Controller

Part Number 865-1032

The MPPT 80 600 Solar Charge Controller offers an industry-first set of integration features and top performance that allows for large PV array systems to be easily installed and connected to the battery bank at the lowest possible cost.

For more information, go to http://solar.schneider-electric.com.




Figure 1-7 Conext MPPT 80 600 Solar Charge Controller

975-0714-01-01

# **Conext System Control Panel**

Part Number 865-1050-01

The Conext System Control Panel (SCP) gives a single point of control to set up and monitor your entire Conext XW+ Inverter/Charger installation.

Featuring a graphical, backlit liquid crystal display, the SCP displays configuration and diagnostic information for devices connected to the network.

For installation instructions, see "Conext System Control Panel Installation" on page 5–2 of this Guide.

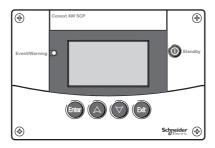


Figure 1-8 Conext System Control Panel

# **Conext Automatic Generator Start**

Part Number 865-1060-01

The Conext Automatic Generator Start (AGS) can automatically start and stop a generator, providing your Conext XW+ Inverter/Charger with power to recharge depleted batteries while powering your loads. The AGS adds intelligence to power management and minimizes time spent monitoring batteries and inverter loads.

For more information, see the Conext Automatic Generator Start Owner's Guide.

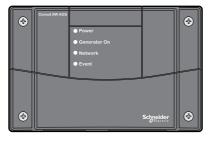


Figure 1-9 Conext Automatic Generator Start

1-8

# **Conext ComBox**

Part Number 865-1058 The Conext ComBox Communication and Monitoring Device is a multi-function communication device that enables monitoring of system performance through a PC or the Internet.

It also acts as a communications gateway between a network of Xanbus<sup>TM</sup>-enabled devices and Modbus devices.

For more information, see the Conext ComBox Owner's Guide.

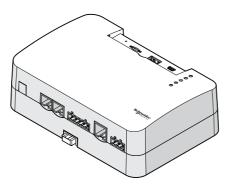


Figure 1-10 Conext ComBox

# **Conext Battery Monitor**

Part Number 865-1080-01

The Battery Monitor is Xanbus-enabled, and features a local display to selectively show the estimated operating voltage, current, consumed amp-hours, remaining capacity and remaining hours in your 48 V battery bank.

For more information, see the Conext Battery Monitor Quick Start Guide.



Figure 1-11 Conext Battery Monitor

# Battery Fuse Disconnect Box (250A)

Part Number 865-1031-01

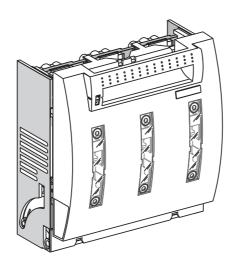


Figure 1-12 Battery Fuse Disconnect Box (250A)

# Battery Fuse Disconnect Box (160A)

Part Number 865-1030-01

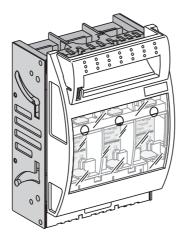


Figure 1-13 Battery Fuse Disconnect Box (160A)

2

# Pre-Installation and Wall-Mounting

Chapter 2, "Pre-Installation and Wall-Mounting" describes the pre-installation steps, and gives instructions for wall-mounting the Conext XW+ and Conext XW+ Conduit Box.

Topics in this chapter include:

- "Pre-Installation" on page 2–2
- "Wall-Mounting" on page 2–6
- "Communications Network Preparation" on page 2–12
- "Battery Bank Preparation" on page 2-13
- "Torque Values" on page 2–16

# **Pre-Installation**

Before installing the Conext XW+ Inverter/Charger, read all instructions and cautionary markings in this Guide.

**Note:** Obtain all necessary permits prior to starting the installation. **Installations must meet all local codes and standards.** Installation of this equipment should only be performed by skilled personnel such as qualified electricians and Certified Renewable Energy (RE) System installers.

# **AWARNING**

#### **HEAVY EQUIPMENT**

The Conext XW+ Inverter/Charger weighs approximately 54 kg. A two-person lift is required. To prevent personal injury, always use proper lifting techniques during installation.

Failure to follow these instructions can result in death or serious injury.

# Planning the Installation

- Read this entire chapter before beginning the installation. It is important to plan the installation from beginning to end.
- Assemble all tools and materials needed for the installation.

# Installation Tools and Materials

То	complete the installation, you will need the following tools:
	Socket wrench, appropriately sized
	Phillips head screwdriver, appropriately sized
□	Level
	pending on your installation, additional hardware may be required. The owing items are not included with the Conext XW+ Inverter/Charger:
	Battery cables
□	Wiring to connect the Conext XW+ Inverter/Charger to the inverter load sub-panel and utility grid (see "Torque Values" on page 2–16)
	Grounding wire: 2.5 mm <sup>2</sup> to 35 mm <sup>2</sup> # (14 AWG to #2 AWG)
□	Hacksaw (for cutting power distribution bumpers)
	Lag bolts to secure the mounting plates
	Screws for mounting the Conduit Box
	Appropriate materials and hardware for additional wall-mount support

# Location

The Conext XW+ is certified for dry, indoor (heated or unheated) installations only.

Locate any electronic equipment susceptible to radio frequency and electromagnetic interference as far away from the inverter as possible.

# Fire safety

# **WARNING**

#### **IGNITION AND FIRE HAZARD**

This equipment is not ignition protected. To prevent fire or explosion, do not install this product in locations that require ignition-protected equipment. This includes any confined space containing lead acid batteries, or flammable chemicals such as, natural gas (NG), liquid petroleum gas (LPG) or gasoline (Benzine/Petrol).

- Do not install in a confined space with machinery powered by flammable chemicals, or storage tanks, fittings, or other connections between components of fuel or flammable chemical systems.
- Do not install the inverter near readily flammable materials such as cloth, paper, straw, or plastic sheeting. Keep flammable materials a minimum distance of 600 cm from the top surface and 30 cm from either side surface and the front of the Conext XW+ Inverter/Charger.

Failure to follow these instructions can result in death or serious injury.

975-0714-01-01 2–3

# Clearance Requirements

Provide at least 91 cm of clearance in front of the inverter, and a minimum of 15 cm of clearance at the top and bottom of the inverter for ventilation. Ensure the vents remain unobstructed, and that the Conext XW+ Power Distribution Panel door has adequate room to fully open.


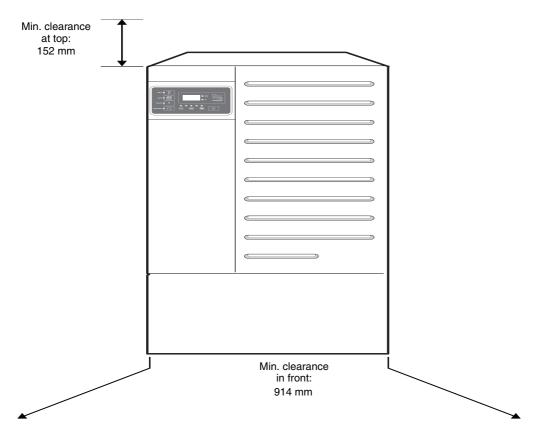


Figure 2-1 Example of clearance requirements for a Conext XW+ with PDP

# **Knockout Selection**

**Note:** Do not drill, cut, or punch holes into the Conext XW+ Inverter/Charger or Conext XW+ Conduit Box. Use only the knockouts provided for conduit entry.

The Conext XW+ Inverter/Charger, Conext XW+ Power Distribution Panel, and Conext XW+ Conduit Box are equipped with nested dual knockouts for wiring through conduits.

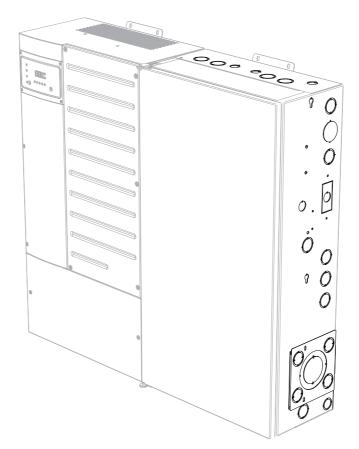

Read Chapter 3, "Wiring the Conext XW+ Inverter/Charger" and choose the knockouts for your installation.

Figure 2-2 Example of available knockouts on the Conduit Box

Remove your choice of knockouts from the Conext XW+ chassis, Conext XW+ Power Distribution Panel, and Conext XW+ Conduit Box. Ensure that no debris remains inside the chassis. Insert appropriately-sized conduit bushings into each conduit hole.

# Air Filter and AUX Port Connector Installation

Insert the air filter by tucking it into the grooves on the sides of the air vent cover (See Figure 2-3.)

If you are planning to use the auxiliary (AUX) port features, insert the AUX port connector into the AUX port. (See Figure 2-3.)

975-0714-01-01 2–5

Air filter

AUX port

Air vent

For more information, see "AUX Port" on page 3-4 of this Guide.

Figure 2-3 Air Filter and AUX Port Connector Installation

# **Wall-Mounting**

# **A WARNING**

### **HEAVY EQUIPMENT**

The Conext XW+ Inverter/Charger can cause serious injury if it falls or is dropped on a person.

For structural and seismic stability, the Conext XW+ Inverter/Charger must be mounted onto a vertical supporting surface strong enough to support a minimum of 227 kg.

Failure to follow these instructions can result in death or serious injury.

A mounting plate is included with each Conext XW+ Inverter/Charger and Conext XW+ Power Distribution Panel designed to meet standards for structural and seismic stability.

Each Conext XW+ and PDP requires a separate mounting plate. Attach the mounting plate to the wall before you attach the Conext XW+ to the mounting plate.

Each mounting plate requires a minimum of four 6 mm diameter lag bolts or other fasteners (not included). The fasteners must be strong enough to support 227 kg.

2-6

The type of fastener required to secure the mounting plate varies according to the vertical surface and wall structure of your installation location. For a list of recommended fasteners, see Table 2-1, below.

Table 2-1 Recommended fasteners

Structure	Required Fastener	Screws Per Plate
Wood studs at 400 mm (on center - O.C.)	6 mm Ø x 89 mm long lag screw	Four
Wood studs not at 400 mm O.C.	6 mm Ø × 25mm long wood	Six
(20 mm minimum plywood panel required)	screw	
Steel studs at 400 mm O.C. (minimum 18 gauge)	6 mm Ø self-drilling screw	Four

The holes of each mounting plate are spaced 16 inches (400 mm) apart, so that the mounting plate will span two wall studs spaced 16 (400 mm) inches on-center. Additional mounting holes are provided to allow for other mounting options.

**Note:** If the wall does not have 16-inch (400 mm) on-center studs, you will need to provide adequate support for the mounting plates. For example, a sheet of plywood can be attached to the wall, and the mounting plates can then be attached to plywood.

# Installing the Mounting Plate

# To install the mounting plate:

- 1. Locate the wall studs.
- 2. If necessary, secure a 20 mm plywood panel or other appropriate additional support panel to the wall studs. The additional support panel must span at least three wall studs.

**Note:** To secure the additional support panel to the wall, use hardware sized to support a minimum of 227 kg. (Hardware not included.)

975-0714-01-01 2–7

3. Using a level, secure the first mounting bracket to the wall. Ensure the mounting plate is centered on the wall studs, as shown in Figure 2-4. Use recommended anchoring hardware to secure the plate (see Table 2-1).

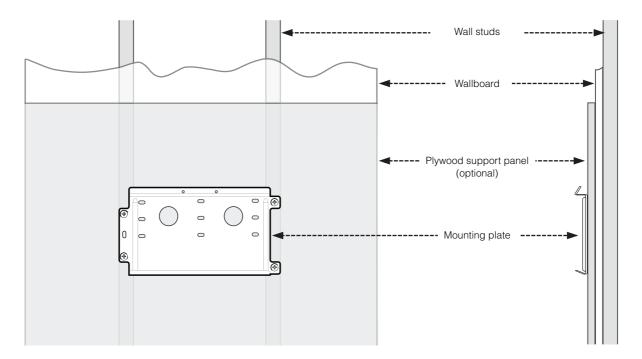


Figure 2-4 Mounting plate centered on wall studs

# Installation tip

If you install the bottom of the mounting plate at 152 cm from floor, the inverter information panel will be approximately 165 cm from the floor.

4. Install additional mounting plates adjacent to each other as needed.

**Note:** The mounting plates are designed to interlock (as shown in Figure 2-5, so that multiple plates can be installed without additional measuring or leveling.

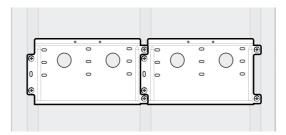


Figure 2-5 Two interlocking mounting plates

# Wall-Mounting the Conext XW+

# To wall-mount the Conext XW+ Inverter/Charger:

1. Align the flange on the back of the Conext XW+ chassis with the bottom edge of the mounting plate, as shown in Figure 2-6.

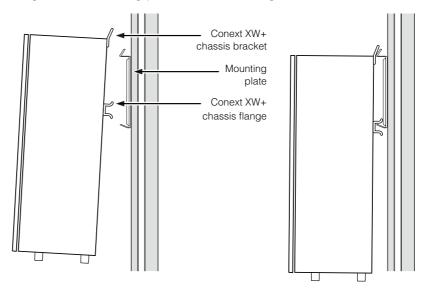


Figure 2-6 Wall-mounting the Conext XW+

# **AWARNING**

# **HEAVY EQUIPMENT**

The Conext XW+ Inverter/Charger weighs approximately 54 kg. A two-person lift is required. To prevent personal injury, always use proper lifting techniques during installation.

Failure to follow these instructions can result in death or serious injury.

- 2. Lower the Conext XW+ chassis flange onto the mounting plate.
- 3. Secure the bracket at the top of the Conext XW+ chassis with two #10 self-tapping screws (included).
- 4. Wall-mount the PDP and any additional Conext XW+ Inverter/Chargers using the same procedure shown in steps 1-3 (above).

**Note:** The Conext XW+ Power Distribution Panel may not be available in all regions; installation is dependent upon your local electrical code. Consult your local electrical authority to ensure your installation is code-compliant.

#### Installation tip

The PDP is designed to mount on the right side of the inverter/charger, but it can be configured to mount on the left side instead. For more information, see the Conext XW+ Power Distribution Panel Installation Guide.

# Installing the Conext XW+ Conduit Box

The Conext XW+ Conduit Box is divided into two parts: the rear panel and the front panel.

To secure the Conduit Box to the Conext XW+ chassis:

- 1. Remove both #10 screws from the bottom of the Conext XW+ chassis.
- 2. Find the keyhole slots located under the top of the rear panel.
- 3. Align the keyhole slots on the top panel of the Conduit Box with the corresponding #10 screws on the bottom of the inverter.

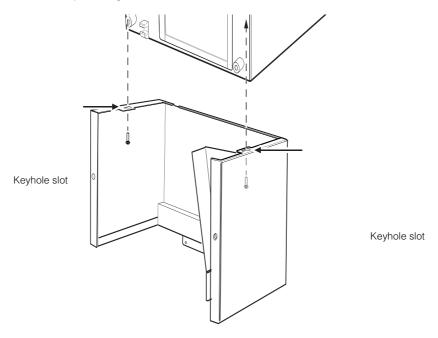


Figure 2-7 Conduit Box keyhole alignment

4. Secure the Conduit Box to the inverter with the both #10 screws.

5. Using two screws (not included), secure the bracket at the bottom edge of the rear panel to the wall. See Figure 2-8.

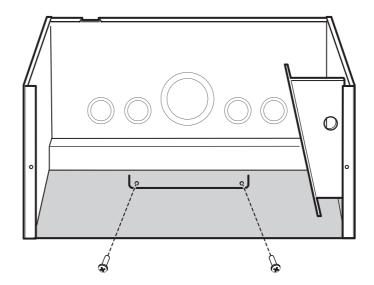


Figure 2-8 Wall-mounting the Conduit Box

# Installation tip

Do not secure the front panel of the Conduit Box until you have completed all wiring.

# To secure the front panel of the Conduit Box:

- 1. Slide the bottom lip of the front panel over the lower edge of the rear panel.
- 2. Align the two holes in the front panel with the two holes in the back panel.
- 3. Using two #10-32 screws (included), secure the front panel to the rear panel.

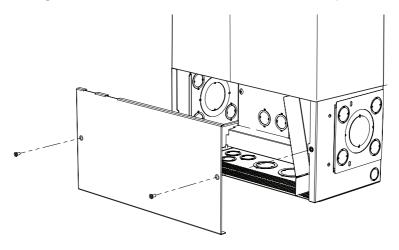


Figure 2-9 Conduit Box installation

# **Communications Network Preparation**

# **WARNING**

#### **XANBUS SHOCK HAZARD**

Xanbus cables in contact with DC or AC power can transmit an electric shock. Do not route the Xanbus cables in the same conduit or panel as the AC and DC power cabling.

Failure to follow these instructions can result in death or serious injury.

To separate the communications cables and signal cables from the DC and AC wiring, a raceway (wire barrier) has been included in the design of the Conext Conext XW+ Conduit Box.

This raceway is built into the bottom of the Conext XW+ Conduit Box (see Figure 2-10, below) and is held in place by a single screw at the top of the raceway.

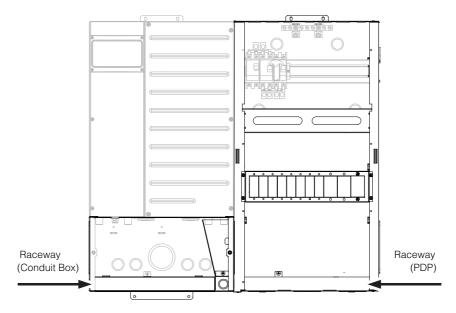


Figure 2-10 Example of raceways in a single-inverter system

Before making AC and DC connections, route communication cables (including Battery Temperature Sensor) through the raceways. For easier identification, use a different color for each communications cable, or cable tags.

Connect communications cables to their components after AC and DC connections are made.

# **Battery Bank Preparation**

# **WARNING**

#### **BATTERY TYPE AND SET UP HAZARDS**

Incorrect battery configurations or settings for battery types can lead to dangerously high battery temperature, fire and explosion.

To avoid damaging your batteries during charging or equalization, and to minimize the risk of fire or explosion consult battery manufacture's documentation before setting battery parameters and follow the battery manufacturer's recommended settings.

- Always use and connect the Battery Temperature Sensor (BTS).
- Always verify that the configured battery type matches the battery type being used.
- Custom battery settings should be configured by qualified personnel only.
- When using Lithium-Ion batteries, ensure that the battery pack being used includes a Battery Management System (BMS) with safety controls.
- Do not use wet type Lithium-Ion batteries.

Failure to follow these instructions can result in death or serious injury.

The Conext XW+ Inverter/Charger operates with batteries as its source of DC power. If DC power sources are connected directly to the inverter, the DC rating of the inverter can be exceeded and the inverter can be damaged.

# NOTICE

#### OTHER SOURCES OF DC POWER

Do not connect DC power sources, such as PV arrays, wind turbines, or micro-hydro turbines, directly to the Conext XW+ Inverter/Charger. Connect DC power sources to a charge controller and then from the charge controller to the battery. DC surge protection should also be installed.

Failure to follow these instructions can result in damage to equipment.

Choose Flooded, AGM, Gel, Lithium-Ion, or custom batteries for your installation.

Consider the following recommendations for battery use:

- Use only deep cycle types for inverter applications.
- Use the same battery type for all batteries in the bank.
- Use only batteries from the same lot and date in your battery bank.
   This information is usually printed on a label located on the battery.

# **Battery Bank Requirements**

The DC voltage of the Conext XW+ Inverter/Charger must match the nominal voltage of the system and battery-connected devices. The inverter is a 48 V inverter; therefore, the battery bank and battery-connected devices in the system must be configured for 48 volts.

**Note:** The minimum recommended battery bank is 440 Ah per inverter/charger. The Conext XW+ Inverter/Charger is designed to operate with batteries and should not be operated without them. Also, do not allow the battery bank to become completely discharged. If the voltage of the battery bank falls below 40 volts, the Conext XW+ Inverter/Charger will not operate.

# **Battery Cable Requirements**

# **WARNING**

# **OVERHEATING OF DC TERMINALS AND CABLES**

Overheating of the DC terminals or DC cables to dangerous temperatures may occur due to improper installation.

- Do not put anything between the cable lug and the terminal surface.
- Do not over-tighten connections; observe all recommended torque values.
- Do not apply any type of anti-oxidant paste until after the cable connection is tightened.
- Do not under size cables; install cables sized in accordance with national electrical code requirements.
- DC cables must have crimped copper compression lugs or crimped and soldered copper compression lugs; soldered connections alone are not acceptable. Lugs must be rated for use with fine-stranded cable.
- Do not use coarse-stranded cable; the lack of flexibility may pull DC terminal connections loose.

Failure to follow these instructions can result in death or serious injury.

# Battery cable length

Cable runs should be kept as short as practical. Length should not exceed 10 feet (3 m). Run the positive and negative cables alongside each other. Avoid cable loops.

In order to keep the battery cable length short, install the Conext XW+ Inverter/ Charger as close as possible to the battery room or battery enclosure.

**Note:** For best system performance, ensure that positive and negative battery cables are installed in close proximity to each other.

# Overcurrent protection

# **A WARNING**

# FIRE HAZARD FROM DC OVER CURRENT

Your local electrical code may require both DC over current protection and a DC disconnect switch for residential and commercial electrical systems. Fuses and disconnects must be sized to protect the wiring in the system and are required to open before the wire reaches its maximum current carrying capability.

Failure to follow these instructions can result in death or serious injury.

# Terminal covers

Color-coded snap-on DC terminal covers are included to avoid accidental contact with the terminals. Terminal covers are required for all installations, even if a Conext XW+ Conduit Box is used. It is also recommended that the shank of the ring terminals (cable lugs) be covered with heat shrink or some other form of insulation.

**Note:** Your local electrical code may require both overcurrent protection and a disconnect switch for residential and commercial electrical systems. These items are not supplied as part of the inverter, but are included with the Conext XW+ Power Distribution Panel.

Table 2-2 Recommended Battery Cable Size Versus Length

Inverter Model	Up to 5 Feet (1.5 m) (90°C wire)	Up to 10 Feet (3 m) (90°C wire)
Conext XW+ 7048 E	70 mm <sup>2</sup> (#2/0 AWG)	120 mm <sup>2</sup> (#4/0 AWG)
Conext XW+ 8548 E	120 mm <sup>2</sup> (#4/0 AWG)	120 mm <sup>2</sup> (#4/0 AWG)

Table 2-3 Battery Cable (in Conduit) to Maximum Breaker/Fuse Size

Cable Size Required	Maximum Breaker/Fuse Size
70 mm <sup>2</sup> (#2/0 AWG)	175 amps
120 mm <sup>2</sup> (#4/0 AWG)	250 amps

# **Torque Values**

# Torque values for the Conext XW+ Inverter/Charger

 Table 2-4
 Torque Values for AC Wiring (AC Terminals and Ground Bar)

Wire Size		Torque Value	
AWG	mm <sup>2</sup>	In-lb	N-m
14–10	2.5–6	35	4.0
8	10	40	4.5
6–4	16–25	45	5.1

Table 2-5 Torque Values for the Chassis Ground Lug

Wire Size		Torque Value	
AWG	mm <sup>2</sup>	In-lbs	N-m
6–4	16–25	45	5.1
3–2	25–35	50	5.6

**Table 2-6** Torque Values for the Inverter Battery Terminals

Ft-lbs	N-m
15	20.4

# Torque Values for the Conext XW+ Power Distribution Panel

 Table 2-7
 Torque Values for AC Disconnects and AC Breakers

Wire Size		Torque Value	
AWG	mm <sup>2</sup>	In-lb	N-m
16–10	1.31–6	45	5.1
8	10	45	5.1
6–4	16–25	45	5.1

**Table 2-8** Torque Values for the Ground Bus, AC Neutral Bus, DC Negative Bus, and DC Positive Bus in the Conext XW+ Power Distribution Panel

Wire Size		Torque Value	
AWG	mm <sup>2</sup>	In-lbs	N-m
14–10	2.5–6	35	4.0
8	10	40	4.5
6–4	16–25	45	5.1
3–2/0	25–35	50	5.6

**Table 2-9** Torque Values for the power distribution jumpers in the Conext XW+ Power Distribution Panel

Wire Size		Torque Value	
AWG	mm <sup>2</sup>	In-lbs	N-m
14–10	2.5–6	35	4.0
8	10	40	4.5
6–4	16–25	45	5.1
3–2/0	25–35	50	5.6

**Table 2-10** Torque Values for the Battery Cables to the DC Negative Bus, and DC Positive Bus in the Conext XW+ Power Distribution Panel

# Torque Value

Ft-lbs	N-m
15	20.4

•THIS PAGE INTENTIONALLY BLANK•

# Wiring the Conext XW+ Inverter/ Charger

Chapter 3, "Wiring the Conext XW+ Inverter/Charger" describes procedures for installing the Conext XW+ Inverter/Charger.

Topics in this chapter include:

- "Removing the AC Access Panel and PDP Internal Faceplates" on page 3–2
- "Communication Ports and BTS Port" on page 3–4
- "Wiring the Conext XW+ Inverter/ Charger without a PDP" on page 3–6
- "Wiring the Conext XW+ Inverter/ Charger with a PDP" on page 3–37

# Removing the AC Access Panel and PDP Internal Faceplates

# **AC Access Panel Removal**

# **A** A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See EN 50110.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

# **AA** DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

# **AA** DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

To access the AC terminal block on the Conext XW+ for AC wiring, you will need to remove the AC access panel, located below the inverter information panel on the left side of the Conext XW+ chassis.

To remove the AC access panel, remove the two screws from the AC access cover and slide the cover slightly to the left and lift away from the Conext XW+ chassis.

# Installation tip

When re-securing the AC access cover, ensure its recessed edge slips inside the edge of the front panel.

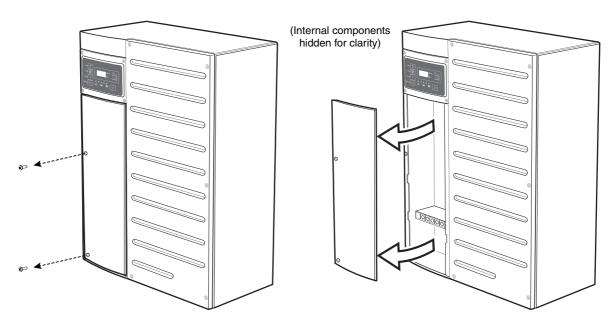


Figure 3-1 AC access panel removal

# **Communication Ports and BTS Port**

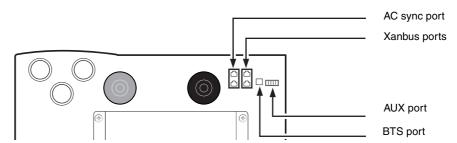


Figure 3-2 Conext XW+ Inverter/Charger communication ports

There are five communication ports and a Battery Temperature Sensor (BTS) port located on the bottom of the Conext XW+ chassis (as shown above in Figure 3-2):

Two Xanbus ports for making network connections between inverters, charge controllers, and accessories. For more information, see Chapter 4, "Xanbus Network Installation".

Two AC sync ports to connect multiple Conext XW+ Inverter/Chargers in parallel. For installation instructions, see "Installing AC sync and Xanbus cables" on page 4–5.

AUX port: 12 VDC/250 mA output to control a relay, fan, indicator light, or other device, using a Conext System Control Panel (SCP) or Conext ComBox. For more information, see "AUX Port" on page 3–4.

Battery Temperature Sensor (BTS) port: For more information, see "Battery Temperature Sensor Installation" on page 3–9.

# **AUX Port**

The Conext XW+ Inverter/Charger has a 12 VDC auxiliary (AUX) output that can be configured to trigger in response to one of the following conditions:

- low battery voltage
- high battery voltage
- low battery temperature
- high battery temperature
- charge bulk exit
- charge absorption exit
- heatsink temperature
- TOD (time of day)
- SOC (state of charge)

The auxiliary output can also be triggered manually using a Conext System Control Panel or ComBox.

**Note:** The AUX port is connected via an AUX port connector, included with the Conext XW+ Inverter/Charger.

The 12 VDC output can be used to trigger a relay to disconnect batteries from the inverter/charger when battery voltage or temperature are out of range.

The auxiliary output is also designed to provide the following functions:

- Auxiliary 12 VDC power supply. See AUX+12V Voltage Supply, below.
- Remote Power Off. See AUX-RPO: User Remote Power OFF (RPO), below.

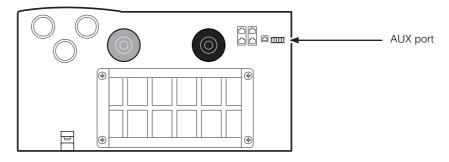


Figure 3-3 AUX Port Location

# **AUX+12V Voltage Supply**

DC voltage is available between JU-1 (AUX +12 V) and JU-3 (AUX-COM, signal return). The power available at these terminals is 12 VDC and maximum current is 250 mA (3 watts).

AUX+12 V and AUX-COM terminals can be used to power a relay (3 watts maximum).

Note: Additional fuses may be necessary for some installations.

AUX +12 V voltage supply can be programmed for different tasks ON and OFF using the Conext System Control Panel.

Default status of AUX+12 V is OFF.

# AUX-RPO: User Remote Power OFF (RPO)

Connecting JU-2 (AUX-RPO) and JU-3 (AUX-COM) terminals together through an external switch (normal open contact) will provide the system shut off function if the switch is closed. The external switch, if pressed, overrides the control provided from the front panel.

To enable the AUX port remote power off function, enable the RPO setting from the System Control Panel. For more information, see the *Conext XW+ Inverter/ Charger Owner's Guide*. If the external switch is cleared (not pressed), the system can be enabled back from the front panel.

Select an external switch with normal open contact; consult your local system designer or qualified technician for specific installation instructions.

# **User Line Wiring**

Use twisted pairs of 0.2mm<sup>2</sup> to 3.31mm<sup>2</sup> (#24 AWG to #12 AWG) for connections. Carefully route the wires away from high power load cables to minimize noise effects on signal integrity.

# **AUX Port Terminal Assignments**

Table 3-1 User Connector Terminals and Functions

Pin	Reference	Name	Function
JU-1	AUX+12V	+12 V User Voltage Supply	+12 VDC Voltage source: 250 mA maximum
JU-2	AUX-RPO	Remote Power Off	Remote Power Off Logic Level: Active Low. Activating this signal shuts down system operation.
JU-3	AUX-COM	Common Ground Reference	Return Common Ground Reference for 12 V, Remote Power Off signals.
JU-4	EXT_TS_OUT	External Transfer switch: Output signal	Open collector type drive circuit (30V/0.5A max)
JU-5	EXT_TS_IN	External Transfer switch: Input signal	External Transfer switch: Low signal range:(0-5V) High signal range:10-28V with the consumption of 8mA@12V and 10mA@24V.

# Wiring the Conext XW+ Inverter/Charger without a PDP

# NOTICE

#### OVERLOADING THE DISTRIBUTION PANEL

The amount of power that can be fed into a distribution panel and the means and location for feed-in, must be in accordance with the current requirements of your local electrical code.

Failure to follow these instructions can result in damage to equipment.

This section provides instructions for making AC and DC connections without a Conext XW+ Power Distribution Panel (PDP). For installations with a PDP, see "Wiring the Conext XW+ Inverter/Charger with a PDP" on page 3–37.

**Note:** If a Conext XW+ Conduit Box is installed, run the communication and Battery Temperature Sensor cables through the raceway at the rear of the Conext XW+ Conduit Box making AC and DC connections. The raceways become more difficult to access after AC and DC wiring is completed. For more information, see "Communications Network Preparation" on page 2–12 of this Guide.

# Conext XW+ Inverter/Charger Grounding

# **AWARNING**

# **UNGROUNDED EQUIPMENT**

Equipment ground terminals must be reliably connected to ground by appropriately sized grounding conductors. All installations must comply with national and local codes. Consult local and national codes for specific grounding and bonding requirements.

Failure to follow these instructions can result in death or serious injury.

The Conext XW+ is provided with ground terminals that must be reliably connected to ground (protective earth) by appropriately sized equipment grounding conductors. System grounding for the AC and DC systems must be done according to all applicable local installation codes.

For more information about system grounding, see "Grounding the DC System" on page 3–7 and "AC Equipment Grounding" on page 3–20.

# **Grounding the DC System**

To connect the Conext XW+ to the DC grounding system, use the ground lug at the bottom of the Conext XW+ chassis (see "Conext XW+ Features" on page 1–3). The terminal accepts wires from 2.5 mm<sup>2</sup> to 35 mm<sup>2</sup> (#14 AWG to #2 AWG).

System grounding for the DC system, which typically involves bonding (connecting) the battery negative circuit to ground, is dependent on the system configuration.


# **A WARNING**

# LACK OF GROUND FAULT DETECTION HAZARD

Ground fault detection on the MPPT 60 150 solar charge controller is circumvented when the XW+ battery negative circuit is grounded.

Failure to follow these instructions can result in death or serious injury.

**Note:** If a grounded DC system is required, ensure that the system bonding is done in one location only, and that all conductors and connections comply with all applicable local installation codes.

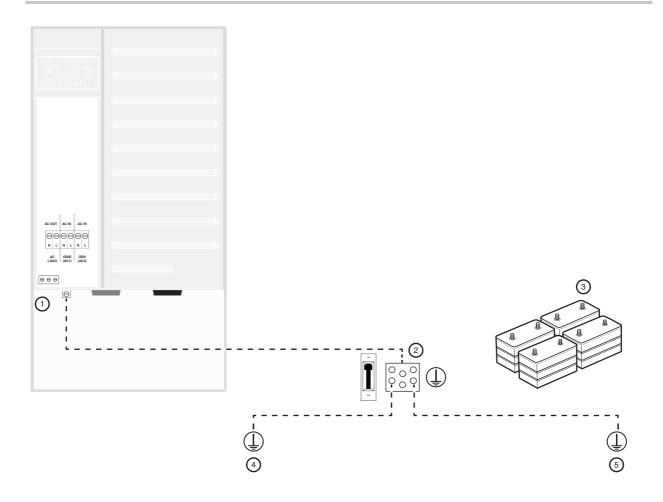

#### LEGEND

- 1. Ground lug
- 2. Negative ground/bus
- 3. Battery
- 4. Primary system ground
- 5. Battery chassis ground (if present)

Actual wiring requirements may vary.

Cable routing may vary. See Knockout Selection on page 2-4 and Communications Network Preparation on page 2-12.

For torque values, see page 2-16 and 2-17.

Figure 3-4 Grounding the DC System

# **Battery Temperature Sensor Installation**

# **AWARNING**

# **BATTERY TEMPERATURE**

The Battery Temperature Sensor provides necessary information for performance and safety.

Always install and connect the Battery Temperature Sensor (BTS). See the note directly below.

Failure to follow these instructions can result in death or serious injury.

**Note:** For all BTS compatible Xanbus enabled devices in the system, at least one BTS must be separately installed for each device type associated with a battery.

If there is a group of the same devices forming a multi-unit setup, only one BTS is required per device type connected to the same battery (same DC association).

See the installation guide of each device for BTS installation instructions.

The Battery Temperature Sensor (BTS) regulates battery charging based on battery temperature. The BTS extends battery life by minimizing overcharging in warm temperatures and undercharging in cold temperatures.

The BTS connects to the Conext XW+ via the BTS port, which is located at the bottom of the Conext XW+ chassis, next to the communication ports.

**Note:** Connect the BTS to the batteries only after the battery bank has been prepared and is ready to connect to the inverter.

# To install the Battery Temperature Sensor:

- 1. Route the BTS cable through your preferred conduit route and insert the BTS jack into the BTS port.
- 2. Route the BTS cable to the battery enclosure, and then connect the BTS using one of the following methods (as shown in Figure 3-5 on page 3–10):
  - a) Connect the BTS ring terminal directly to a battery terminal (recommended), or:
  - b) Attach the BTS to any side of the battery you wish to monitor by using the adhesive backing on the BTS.

**Note:** When using the adhesive backing, install the BTS on the side of the battery below the electrolyte level.

#### Installation tip

Place the sensor between batteries and place the batteries in an insulated box to reduce the influence of the ambient temperature outside the battery enclosure.

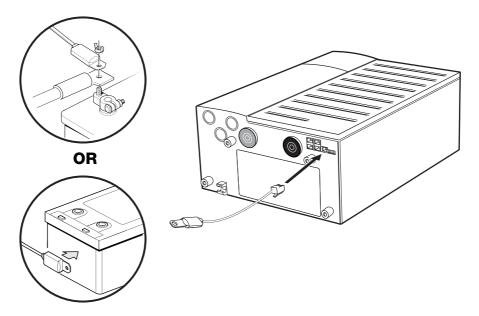


Figure 3-5 Battery Temperature Sensor Installation

# Making DC Connections without a PDP

# **Battery Cables and Battery Terminals**

# **A** A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See EN 50110.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

# **AA** DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

# **A WARNING**

# **OVERHEATING OF DC TERMINALS AND CABLES**

- Overheating of the DC terminals or DC cables to dangerous temperatures may occur due to improper installation.
- Do not put anything between the cable lug and the terminal surface.
- Do not over-tighten connections; observe all recommended torque values.
- Do not apply any type of anti-oxidant paste until after the cable connection is tightened.
- Do not under size cables; install cables sized in accordance with national electrical code requirements.
- DC cables must have crimped copper compression lugs or crimped and soldered copper compression lugs; soldered connections alone are not acceptable. Lugs must be rated for use with fine-stranded cable.
- Do not use coarse-stranded cable; the lack of flexibility may pull DC terminal connections loose.

Failure to follow these instructions can result in death or serious injury.

# NOTICE

#### DC REVERSE POLARITY

Before making the final DC connection or closing the DC breaker or disconnect, check cable polarity at both the battery and the inverter/charger. Positive (+) must be connected to positive (+). Negative (-) must be connected to negative (-).

Failure to follow these instructions can result in damage to equipment.

Battery cables are not included in the Conext XW+ Inverter/Charger package. Depending on your installation requirements, you will need to supply at least one pair of battery cables. For battery cable requirements, see "Battery Cable Requirements" on page 2–14.

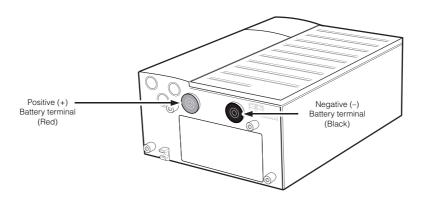


Figure 3-6 Battery terminals (bottom of Conext XW+)

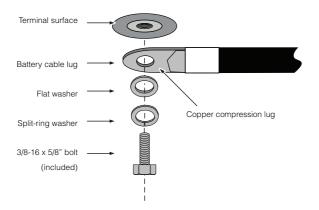


Figure 3-7 Battery cable connection

# To connect DC cables to the Conext XW+ Inverter/Charger (without a PDP):

- 1. Route the DC cables through your chosen knockouts on the Conext XW+ Inverter/Charger.
- 2. Install a Conext Battery Fuse Disconnect Box (see "Optional Accessories" on page 1–4) between the Conext XW+ Inverter/Charger and the battery, as close to the battery as possible. (For detailed installation instructions, consult the documentation included with the Battery Fuse Disconnect Box.)

**Note:** For dual and triple inverter installations, you will need to install two Conext Battery Fuse Disconnect Boxes.

- 3. Connect the POSITIVE (+) cable to the POSITIVE DC terminal on the first inverter/charger (INV1). See Figure 3-8, "DC Connections to a Single Inverter without a PDP" on page 3–14.
  - Be sure to observe proper polarity. See Figure 3-7 (above) for the proper stacking order of hardware.
- 4. Tighten the bolt to the required torque. (See "Torque Values" on page 2–16.)
- 5. Connect the other end of the POSITIVE (+) cable to the Conext Battery Fuse Disconnect Box. (For detailed instructions, consult the documentation included with the Battery Fuse Disconnect Box.)
- 6. Connect the NEGATIVE (–) battery cable to the NEGATIVE (–) DC terminal on INV1. Be careful to observe proper polarity. See Figure 3-7 (above) for the proper stacking order of hardware.
- 7. Tighten the bolt to the required torque. (See "Torque Values" on page 2–16.)
- 8. Connect the other end of the cable to the Conext Battery Fuse Disconnect Box. (For detailed instructions, consult the documentation included with the Battery Fuse Disconnect Box.)
- 9. Tighten the bolt to the required torque. (See "Torque Values" on page 2–16.)
- 10. Attach the DC terminal covers.
- 11. Repeat steps 3 through 10 for the second and third inverter/chargers (INV2 and INV3), as necessary. See Figure 3-9, "DC Connections for a Dual Inverter System without a PDP" on page 3–15 and Figure 3-10, "DC Connections for a Triple Inverter System without a PDP" on page 3–16.

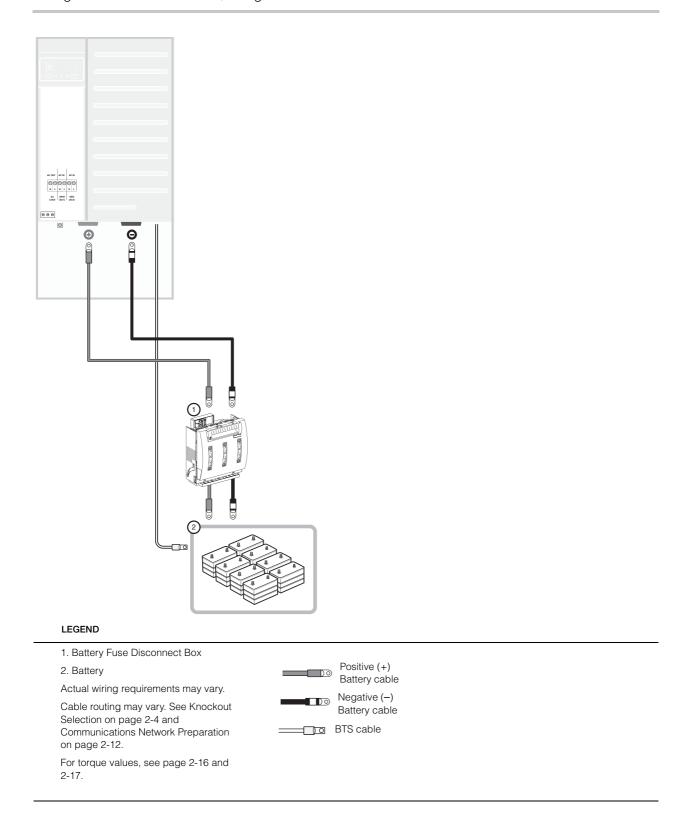


Figure 3-8 DC Connections to a Single Inverter without a PDP

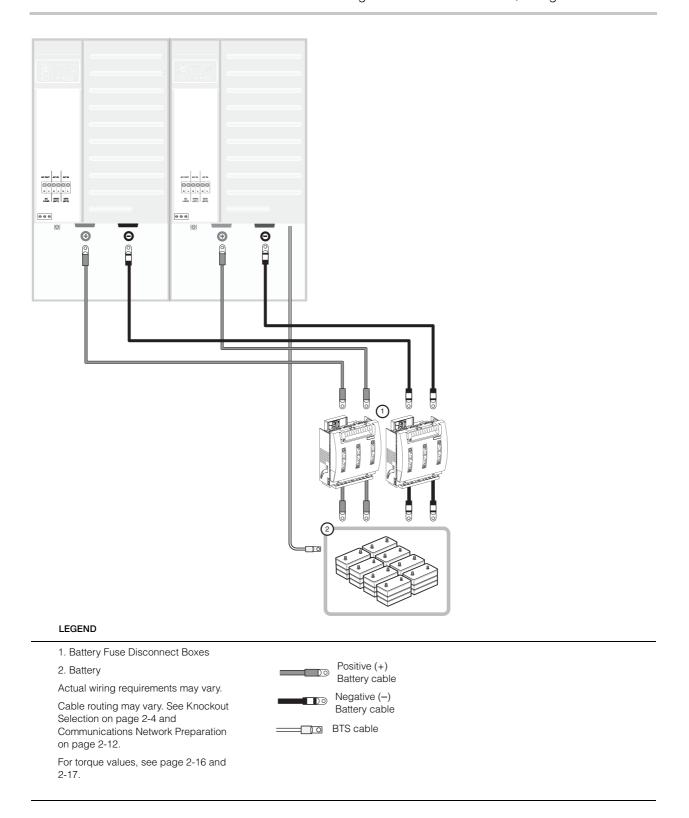


Figure 3-9 DC Connections for a Dual Inverter System without a PDP

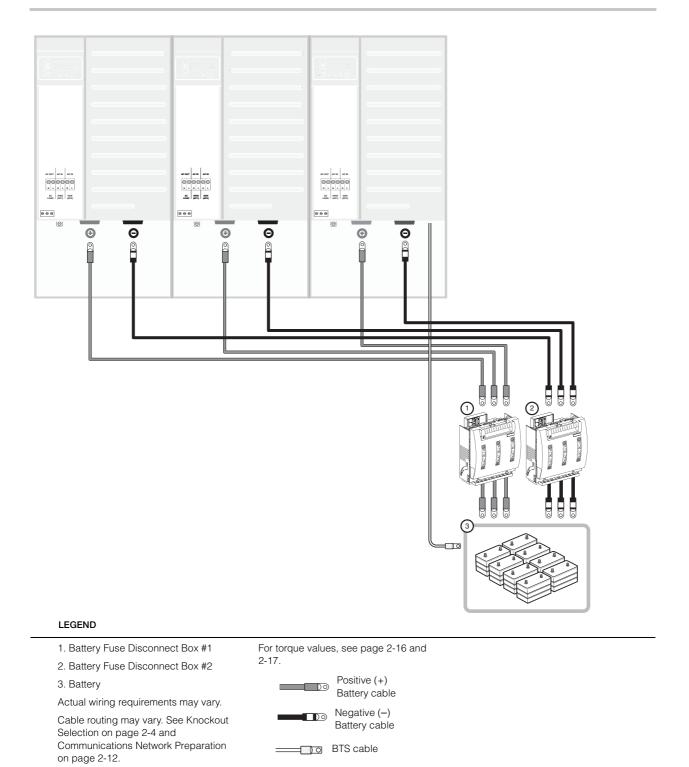


Figure 3-10 DC Connections for a Triple Inverter System without a PDP

# **Making AC Connections**

This section provides instructions for making AC connections between the Conext XW+ Inverter/Charger, the main utility panel, and your inverter load sub-panel without a PDP.

**Note:** AC breakers are not included with the Conext XW+ Inverter/Charger. You will need to provide your own appropriately sized and rated AC breakers. For more information, contact your local Schneider Electric Sales Representative.

**Note:** Install an inverter load sub-panel and AC conduit before completing your Conext XW+ installation. For more information, see "AC wiring the Conext XW+ Inverter/Charger to the Inverter Load Sub-Panel" on page 3–22.

**Note:** Do not use a residual current detection (RCD) equipped AC source to power either the Grid (AC1) or Generator (AC2) inputs. The AC input filters on the Conext XW+ may cause nuisance tripping of ground fault protected outputs.

The Conext XW+ Inverter/Charger has a mains transformer which fully isolates the battery (DC) from the Grid (AC1) and from the Generator (AC2). This galvanic separation allows very low leakage current to pass, rendering the use of an RCD or RCMU (residual current monitoring unit) unnecessary.

# NOTICE

# **BACK FED AC POWER**

Back fed AC Power can damage equipment. Do not wire the inverter's AC output port directly to the utility line or generator output.

Failure to follow these instructions can result in damage to equipment.

**Note:** Wiring the inverter's AC output to the utility or generator output will cause severe damage to the inverter which is not covered under warranty.

For installations that include a PDP, see "Wiring the Conext XW+ Inverter/Charger with a PDP" on page 3–37.

# **AC Terminal Block**

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See EN 50110.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

To access the AC terminal block, you will need to remove the AC access panel. For more information, see "Removing the AC Access Panel and PDP Internal Faceplates" on page 3–2.

The AC terminal block includes two terminals each (L and Neutral) for AC Grid input (AC1), AC Generator input (AC2), and AC Out (AC LOAD) connections.


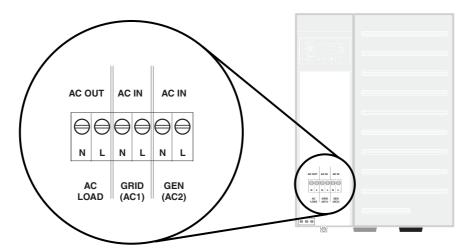


Figure 3-11 AC terminal block

The neutral inputs are connected to each other, requiring only one neutral connection when installed with a Conext XW+ Power Distribution Panel. Without the PDP, additional neutral connections may be required at the input sources.

# **AC Equipment Grounding**

See Table 2-4 on page 2–16 for torque values for the AC terminal and AC ground bar. See Table 2-4 on page 2–16 for torque requirements for the ground bar in the Conext XW+ Power Distribution Panel.

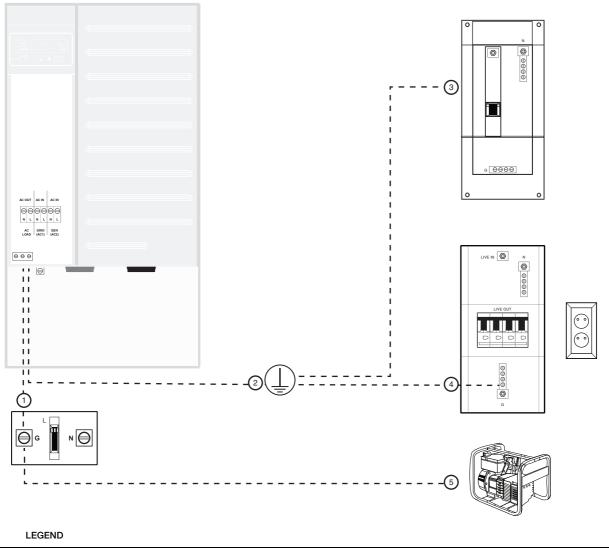

- Generator disconnect
- 2. Primary system ground
- 3. Main utility panel
- 4. Inverter load sub-panel
- 5. AC generator

Grounding requirements may vary.

Cable routing may vary. See Knockout Selection on page 2-4 and Communications Network Preparation on page 2-12. For torque values, see page 2-16 and 2-17.

Figure 3-12 AC Equipment Grounding With the PDP

# **AC System Bonding**

# **WARNING**

# **MULTIPLE AC NEUTRAL-TO-GROUND BONDS**

Verify that only one neutral-to-ground bond exists in the system. Having more than one neutral-to-ground bond in a system violates local electrical codes, may create a shock or fire hazard, and may cause some sensitive equipment to malfunction.

Failure to follow these instructions can result in death or serious injury.

System bonding refers to connection (bonding) of one of the current-carrying conductors of an electrical system to ground. This creates a "grounded conductor" or "neutral" that is at ground potential, but is separate from the equipment ground conductor. System bonding must be done at only one location. Procedures for system bonding vary between on-grid and off-grid systems.

# System bonding for on-grid systems

The Conext XW+ does not connect the neutral to ground. The AC input neutral is already bonded to ground by the incoming utility grid system. Do not connect the neutral to ground in any additional location.

The Conext XW+ does not switch or disconnect the AC neutral in any mode of operation, so even in invert (back-up) mode, the inverter load sub-panel neutral is bonded to ground by the utility grid system. It must not be grounded again in the inverter load sub-panel.

# System bonding for off-grid systems

In a system without a generator, or with a generator that does not provide a grounded neutral, you must make the connection from neutral to ground in the inverter load sub-panel or main distribution panel, as applicable.

In a system with a generator that provides a grounded neutral, no additional connection from neutral to ground is needed. Do not connect neutral to ground in the inverter load sub-panel or main distribution panel, as applicable.

# AC wiring the Conext XW+ Inverter/Charger to the Inverter Load Sub-Panel

# **A** A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See EN 50110.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed.
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge.
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

# **A** A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

An inverter load sub-panel and AC conduit must be installed before your Conext XW+ installation can be completed.

# Wiring

Wiring for connections between the PDP and the inverter load sub-panel is not included. See "Torque Values" on page 2–16 for torque requirements.

# To install the inverter load sub-panel and AC conduit:

- 1. Choose a location for the inverter load sub-panel and install it according to the manufacturer's directions.
- 2. Install an AC conduit between the PDP and the inverter load sub-panel.
- 3. Determine which circuits the Conext XW+ Inverter/Charger will power and install the appropriate circuit breakers into the inverter load sub-panel.
- 4. For on-grid systems:
  - a) Disconnect all power to the main AC panel (utility grid).
  - b) Choose which circuits will be backed by the inverter(s), and remove their wires from the main panel.
  - c) Reroute these wires to the new inverter load sub-panel.
- 5. Remove unused breakers from utility panel.
- 6. Install a 60 amp maximum (disconnect) main circuit breaker in the inverter load sub-panel.

# **NOTICE**

#### **BACK FED AC POWER**

Back fed AC Power can damage equipment. Do not wire the inverter's AC output port directly to the utility line or generator output.

Failure to follow these instructions can result in damage to equipment.

Ensure that the AC system, including the Conext XW+ Inverter/Charger and generator, is correctly grounded according to local electrical codes. See "AC Equipment Grounding" on page 3–20.

**Note:** The instructions below are general guidelines only. AC breaker installation may vary. Consult your system designer or qualified technician for specific installation instructions. For more information, contact your contact your local Schneider Electric Sales Representative.

# To connect the Conext XW+ Inverter/Charger to the inverter load sub-panel:

- 1. See Figure 3-13 on page 3–24. Connect the neutral wire from the inverter load sub-panel neutral bus to the N-LOAD terminal on the inverter.
- 2. Connect the L (LINE) wire from the input terminal on the inverter load sub-panel to the AC Load (L-LOAD) terminal on the inverter.

# To connect the Conext XW+ Inverter/Charger to the main utility panel:

- 1. See Figure 3-13 on page 3–24. Connect the neutral wire from the main utility panel to the inverter GRID (AC1) neutral terminal.
- 2. Connect the AC LINE wire from the main utility panel to the inverter GRID (AC1) L terminal.

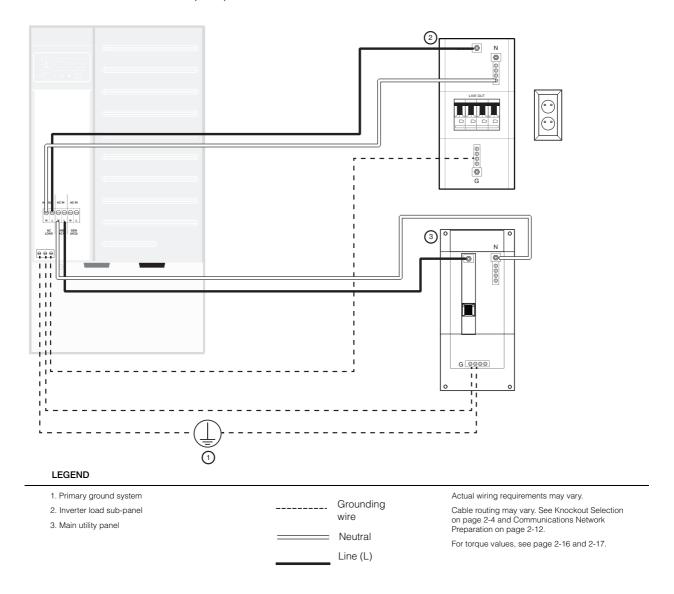


Figure 3-13 Wiring to the Inverter Load Sub-Panel or Utility Grid (no PDP)

# To connect the Conext XW+ Inverter/Charger to the AC generator:

- 1. See Figure 3-14. Connect the ground wire from the generator breaker or disconnect to the inverter's ground bus terminal.
- 2. Connect the Neutral wire from the generator breaker or disconnect to the inverter's AC IN GEN (AC2) N terminal.

3-24

Preparation on page 2-12.

For torque values, see page 2-16 and 2-17.

LEGEND

1. Primary ground system
2. Generator breaker (or AC disconnect)

Wire

Cable rounding wire Capital may vary. Cable rounding nay page 2.5e Knockout Selection on page 24 and Communications Network

3. Connect the L (LINE) wire from the generator breaker or disconnect to the inverter's AC IN GEN (AC2) L terminal.

Figure 3-14 Wiring to the Generator (no PDP)

# To perform a basic functional test for a single inverter:

Neutral

Line (L)

See "Basic Functional Test – Single Inverter" on page 3–28.

# AC wiring additional Conext XW+ Inverter/Chargers without a PDP

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See EN 50110.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed.
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge.
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

# A A DANGER

# HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

#### NOTICE

#### **BACK FED AC POWER**

Back fed AC Power can damage equipment. Do not wire the inverter's AC output port directly to the utility line or generator output.

Failure to follow these instructions can result in damage to equipment.

#### **WARNING**

#### **UNGROUNDED EQUIPMENT**

Equipment ground terminals must be reliably connected to ground by appropriately sized grounding conductors. All installations must comply with national and local codes. Consult local and national codes for specific grounding and bonding requirements.

Failure to follow these instructions can result in death or serious injury.

#### To install multiple inverters:

**Note:** The instructions below are general guidelines only. AC breaker installation may vary. Consult your system designer or qualified technician for specific installation instructions. For more information, contact your contact your local Schneider Electric Sales Representative.

- 1. Disconnect all power from the system.
- 2. Mount additional Conext XW+ Inverter/Chargers. See 9.
- 3. Install conduit and cable clamps for DC cables, AC wiring, and AC Sync cables in accordance with local electrical codes.
- 4. Install Xanbus and AC Sync cables as required. See "Communications Network Preparation" on page 2–12.
- 5. Install a Conext System Control Panel or ComBox. When installing more than one inverter at a location, a Conext System Control Panel or ComBox is required to give each inverter (and other Xanbus-enabled devices) a unique name and to modify the factory-installed default settings to match and support the installation.
- 6. Install all necessary breakers and components (not included) in the inverter load sub-panel and the main utility panel to accommodate the additional Conext XW+ Inverter/Chargers.
- 7. Connect DC wiring. (See "Battery Temperature Sensor Installation" on page 3–9.)
- 8. Connect AC wiring. Ensure that your installation complies with all applicable local installation codes.

#### To perform a basic functional test for a multiple inverters:

See "Basic Functional Test - Multiple Inverters" on page 3-35.

# Basic Functional Test - Single Inverter

Complete the following steps to perform a basic functional test of the Conext XW+ Inverter/Charger. If any test fails, refer to the Troubleshooting section in the Conext XW+ Inverter/Charger Owner's Guide for assistance.

#### **Confirming All Connections**

After the AC and DC wiring have been installed and connected, check that all connections are correct and secure, and re-secure the AC access panel.

#### **A A DANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See EN 50110.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

#### **A** A DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

#### A A DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

#### Applying DC Power to the Inverter

#### NOTICE

#### DC REVERSE POLARITY

Before making the final DC connection or closing the DC breaker or disconnect, check cable polarity at both the battery and the inverter/charger. Positive (+) must be connected to positive (+). Negative (–) must be connected to negative (–).

Failure to follow these instructions can result in damage to equipment.

#### To apply DC power to the inverter:

1. Before applying DC power to the inverter, measure the voltage and check polarity at all connections. (Measure at the battery side of the disconnect or breaker.)

**Note:** Voltage should be between 40 to 64 volts for a 48-volt system. If the DC voltage is low, the battery bank must be charged externally. Charge the battery bank, and then restart the functional test.

If the DC voltage is lower than the Low Battery Cut Out (LBCO) setting (44 volts for a 48-volt system) a DC Under Voltage Fault (F48) will be triggered. If the DC voltage is lower than the default LBCO voltage, lower the LBCO setting accordingly.

2. Apply battery (DC) power to the inverter by closing the battery bank DC disconnect.

The inverter will power up in standby mode, and the inverter information panel will display 5½ (standby), as shown in Figure 3-15.

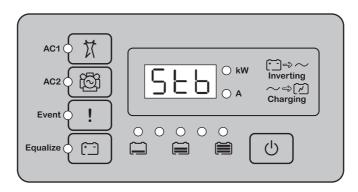


Figure 3-15 Power-up display

#### **Enabling the Inverter**

Invert mode is enabled by default, and the Conext XW+ should begin inverting upon transitioning from standby mode. If invert mode is disabled, the inverter information panel will display "---" once out of standby mode, as shown in Figure 3-16. If the Conext XW+ powers up in standby mode, press the STARTUP/ SHUTDOWN button momentarily to change the mode from standby to operating.

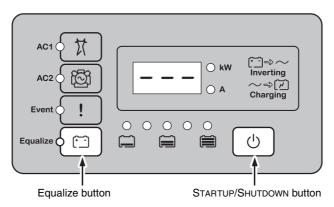


Figure 3-16 Disabled mode

#### To enable the inverter:

◆ On the inverter information panel, simultaneously press the STARTUP/ Shutdown button and the Equalize button. The Conext XW+ is now enabled, and En (enabled) is briefly displayed on the inverter information panel, as shown in Figure 3-17.

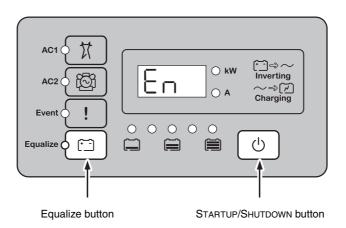


Figure 3-17 Enabled mode

#### To disable the inverter:

• On the inverter information panel, simultaneously press the STARTUP/ SHUTDOWN button and the Equalize button. The Conext XW+ is now disabled, and J is (disabled) is briefly displayed on the inverter information panel, followed by "---" (as shown in Figure 3-18).

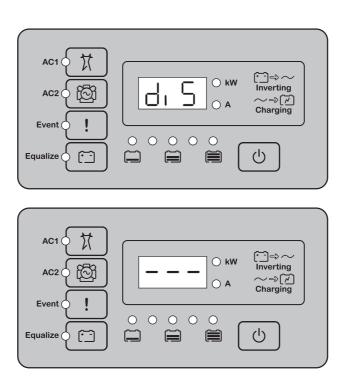


Figure 3-18 Transition to disabled mode

- 3. Monitor the invert (green kW) LED to confirm which mode the inverter is in:
  - kW LED OFF Invert mode is disabled. The inverter/charger is not powering the AC loads. However, if good AC is present, it is passed through to the loads.
  - 5ch displayed on the inverter information panel The inverter/charger is in search mode and is looking for an AC load greater than the Search Watts setting (default = 25 watts). The display shows 5ch (Search) when this mode has been enabled.
  - LED ON The inverter/charger is on. The inverter is operating and is able to provide power to the AC loads. This is the default mode on initial power-up once the unit is taken out of standby mode.

If the inverter is not operating or the inverter LED (kW) does not turn on, check all connections. Check the inverter's DC voltage and polarity on the positive (+) and negative (-) terminals. Check the Fault LED. If the fault LED is on, check for a fault code on the information panel. Correct the reported fault and clear the fault by acknowledging it. If the DC voltage is low, then the battery bank needs to be charged externally. Charge the battery bank and restart the functional test.

#### **AC Voltage Check**

Note: This test requires the use of a voltmeter.

#### To perform an AC voltage check:

- 1. With the inverter on (green kW LED is on and steady), verify the AC voltage at AC Loads block terminal L-Load to N-Load.
- 2. Verify that neutral is bonded to ground in the system by measuring the hot and neutral voltages relative to ground. Neutral-to-ground should equal zero (0) volts.
- 3. After confirming the correct AC voltage, turn on your AC output breaker and place a load on the inverter (plug in a light or other load to an outlet the inverter is powering).
- 4. Confirm that the AC load that was just turned on is working properly.

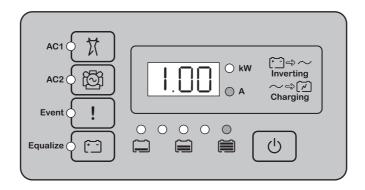


Figure 3-19 Checking AC Voltage

#### **Confirming Battery Charger Operation**

#### To confirm battery charger operation:

- 1. Apply AC from grid or generator. LEDs will blink while the power source is qualified.
- 2. Check LEDs (AC1 or AC2) on the front panel. One of them must be ON for the unit to charge.
- 3. Check the amp (A) LED. If the A LED is ON, the unit is charging and the battery current is displayed on the inverter information panel.

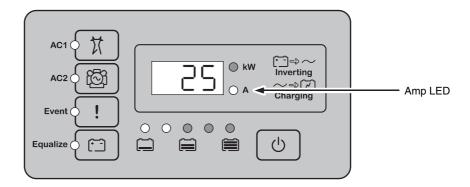


Figure 3-20 Checking Charging Operation

**Note:** Unless the inverter/charger settings have been changed, the inverter will charge as if it has a large (> 440 Ah) flooded battery bank (factory default setting). In newly installed systems, adjust the battery charging set points to match the batteries as installed.

This completes the functional test. If any of the internal set points need to be adjusted on the Conext XW+, consult the configuration chapter of the *Conext XW+ Inverter/Charger Owner's Guide*.

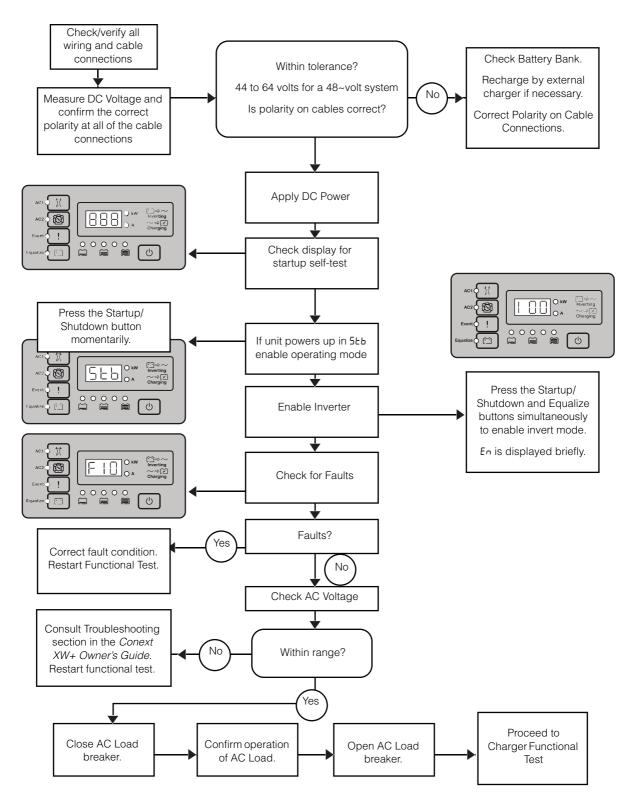


Figure 3-21 Functional Test for Single Inverter Systems

# **Basic Functional Test - Multiple Inverters**

The following steps will complete a basic functional test of multiple Conext XW+ Inverter/Chargers. If any test fails, please refer to the Troubleshooting section in the *Conext XW+ Inverter/Charger Owner's Guide* for assistance.

#### To perform a functional test on multiple inverters:

- 1. Check/verify all wiring and cable connections.
- 2. Measure DC voltage at the DC terminals on the inverter and confirm it is within range and has correct polarity. The default acceptable range is 46 to 64 VDC for 48 V systems.
- 3. Switch INV1 DISCONNECT to the ON position.
- 4. Check inverter display for startup self-test during which LEDs will flash momentarily. Once self-test is complete, the inverter will display 5Łb. (The Fault/Warning LED may flash for a few seconds but eventually will turn off. If Fault/Warning LED persists, check to make sure a battery temperature sensor is connected. Also, if the inverter has been pre-configured, it may go straight into normal operating mode.)
- 5. Using the Conext System Control Panel, set the First (Master) Inverter Device Number:
  - a) Go to the inverter's Advanced Settings menu by pressing Down arrow + Enter from the System Status screen and then simultaneously pressing Enter + Up arrow + Down arrow.
  - b) Select Multi Unit Config menu.
  - c) Change Dev Number from 00 to 01. The inverter will now appear as XW6848-01 in the device list.
  - d) Press Exit to go back to the System Status screen.
- 6. Switch INV2 DISCONNECT to the ON position.
- 7. Check inverter display for startup self-test during which LEDs will flash momentarily. Once self-test is complete, the inverter will display 5½. (If the inverter has been pre-configured, it may go straight into normal operating mode or display F66 warning.)
- 8. Using the Conext System Control Panel, set the Second (Slave) Invert er Device Number and Inverter Mode:
  - a) Select the new inverter, XW6848-00, in the device list.
  - Go to the inverter's Advanced Settings > Multi-Unit Configmenu.
  - c) Change Dev Number from 00 to 02 (or the next number that has not been used). The inverter will now appear as XW6848-02 in the device list.
  - d) Change Invtr Mode from SplitPhMaster to SplitPhSlave.
  - e) Press Exit until you see the System Status screen.
- 9. Check for faults. If fault condition(s) exist, correct and restart Functional Test.
- 10. If a third inverter is installed, repeat steps to configure it as a Slave.
- 11. Using the Conext System Control Panel, enable the system:
  - a) Go to the System Settings menu.

- b) Change System Mode to Operating.
- c) Press Exit until you see the System Status screen.
- 12. Confirm the Master inverter displays 0.00 and the Slaves displays "---" on their front panels.
- 13. Check for faults. If fault condition(s) exist, correct, and then restart Functional Test.
- 14. Check voltage at AC LOAD terminals of the Master inverter.
- 15. Switch the AC Load breakers ON.
- 16. Confirm operation of connected AC loads.
- 17. Disconnect AC LOAD breakers.
- 18. Using the Conext System Control Panel, reduce maximum charge rate.
  - a) From the System Status screen, go to System Settings and enable Cascading (if not enabled). With Cascading enabled, a change to a setting in one inverter will automatically ripple through to the other inverter(s) in the system.
  - b) Go to Advanced Settings > Charger Settings in one of the inverters.
  - c) Set Max Chg Rate to 10%.
  - d) Press Exit until you see the System Status screen.
- 19. Switch AC input breakers ON.

**Note:** All inverters in the system must be connected to the same AC input source before they will qualify the source.

20. Confirm both inverters start charging.

**Note:** With Max Chg Rate set to 10% the maximum charge rate is limited to 10 A on each inverter. Depending on the battery bank's state-of-charge, the output from one or more inverters may quickly drop to zero. This is considered normal operation.

21. Check for faults. If fault condition(s) exist, correct, and then restart the Functional Test.

If the Inverters pass the Functional Test, proceed to the Commissioning procedure as defined in *Conext XW+ Inverter/Charger Owner's Guide*.

# Wiring the Conext XW+ Inverter/Charger with a PDP

This section provides instructions for making AC and DC connections between the Conext XW+ Inverter/Charger and a Conext XW+ Power Distribution Panel, using the cables that are included with the PDP and Conext XW+ Connection Kit.

**Note:** AC breakers are not included with the Conext XW+ Inverter/Charger or Conext XW+ Power Distribution Panel. You will need to provide your own appropriately sized and rated AC breakers. For more information, contact your local Schneider Electric Sales Representative.

**Note:** The dual and triple inverter installation steps described in this section require a Conext XW+ Connection Kit (part number 865-1020-02) for each additional Conext XW+ Inverter/Charger.

For more information, contact your local Schneider Electric Sales Representative or visit our website at: http://solar.schneider-electric.com/tech-support/

**Note:** The Conext XW+ Power Distribution Panel may not be available in all regions; installation is dependent upon your local electrical code. Consult your local electrical authority to ensure your installation is code-compliant.

#### NOTICE

#### **EQUIPMENT DAMAGE**

Be sure to finish all wiring (AC, DC, Xanbus, communications) when installing additional Conext XW+ units including "Installing AC sync and Xanbus cables" on page 4–5 prior to powering up the system.

Failure to follow these instructions can result in equipment damage.

#### **Pre-Installation Steps**

#### A A DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See EN 50110.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

#### A A DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

#### **A** A DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

Before installing Conext XW+ units with a PDP, disconnect all power from the system.

Depending on your installation, you may need to perform the following pre-installation steps:

- 1. Wall-mount Conext XW+ Inverter/Charger(s), as needed. See "Wall-Mounting the Conext XW+" on page 2–9.
- 2. Install Conext XW+ Conduit Box as needed. See "Installing the Conext XW+ Conduit Box" on page 2–10.
- 3. Prepare the communications network. See "Communications Network Preparation" on page 2–12.
- 4. For dual and triple inverter installations, install a Conext System Control Panel or Conext ComBox to configure programmable settings and to name specific network components, as needed. See "Conext XW+ Inverter/Charger Accessories Installation" on page 5–1.

**Note:** When installing more than one Conext XW+ Inverter/Charger at a location, use a Conext System Control Panel, Conext ComBox, or Conext Configuration Tool to give a unique name to each Conext XW+ (and other Xanbus-enabled devices), and to modify the factory-installed default settings to match and support the installed configuration.

#### Conext XW+ Power Distribution Panel Internal Faceplate Removal

If you are wiring the Conext XW+ Inverter/Charger to a Conext XW+ Power Distribution Panel (PDP), you will need to remove the two front faceplates from the PDP.

For easier access to the faceplates, begin by removing the panel door from its hinges.

#### To remove the PDP door:

- 5. Remove the screw at the top hinge of the PDP door and remove the top section of the hinge.
- 6. Using your thumb or forefinger, gently pivot the hinge upward as you remove the PDP door.

#### To remove the PDP faceplates:

- 1. Remove the four screws holding the upper faceplate in place.
- 2. Remove the four screws holding the lower faceplate in place.

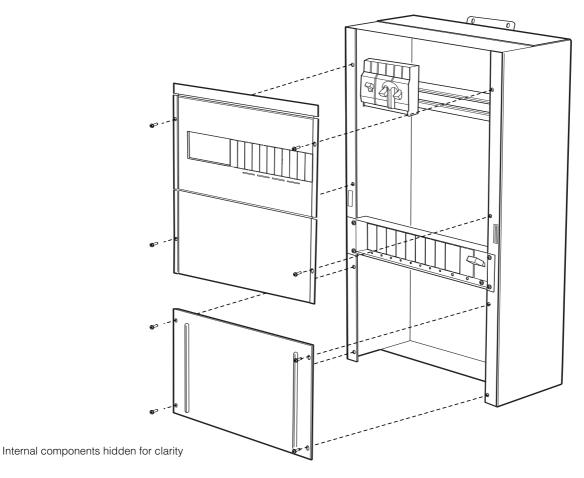


Figure 3-22 Conext XW+ Power Distribution Panel faceplate removal

#### Conext XW+ Inverter/Charger Grounding

#### **AWARNING**

#### **UNGROUNDED EQUIPMENT**

Equipment ground terminals must be reliably connected to ground by appropriately sized grounding conductors. All installations must comply with national and local codes. Consult local and national codes for specific grounding and bonding requirements.

Failure to follow these instructions can result in death or serious injury.

The Conext XW+ is provided with ground terminals that must be reliably connected to ground (protective earth) by appropriately sized equipment grounding conductors. System grounding for the AC and DC systems must be done according to all applicable local installation codes.

For more information about system grounding, see "Grounding the DC System" on page 3–7 and "AC Equipment Grounding" on page 3–20.

#### Making DC Connections with a PDP

#### **Battery Cables and Battery Terminals**

#### A A DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See EN 50110.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

#### A A DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

#### A A DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

#### **WARNING**

#### **OVERHEATING OF DC TERMINALS AND CABLES**

- Overheating of the DC terminals or DC cables to dangerous temperatures may occur due to improper installation.
- Do not put anything between the cable lug and the terminal surface.
- Do not over-tighten connections; observe all recommended torque values.
- Do not apply any type of anti-oxidant paste until after the cable connection is tightened.
- Do not under size cables; install cables sized in accordance with national electrical code requirements.
- DC cables must have crimped copper compression lugs or crimped and soldered copper compression lugs; soldered connections alone are not acceptable. Lugs must be rated for use with fine-stranded cable.
- Do not use coarse-stranded cable; the lack of flexibility may pull DC terminal connections loose.

Failure to follow these instructions can result in death or serious injury.

#### NOTICE

#### DC REVERSE POLARITY

Before making the final DC connection or closing the DC breaker or disconnect, check cable polarity at both the battery and the inverter/charger. Positive (+) must be connected to positive (+). Negative (-) must be connected to negative (-).

Failure to follow these instructions can result in damage to equipment.

See "Battery Cables and Battery Terminals" on page 3-10.

#### **DC** Grounding

#### **WARNING**

#### **UNGROUNDED EQUIPMENT**

Equipment ground terminals must be reliably connected to ground by appropriately sized grounding conductors. All installations must comply with national and local codes. Consult local and national codes for specific grounding and bonding requirements.

Failure to follow these instructions can result in death or serious injury.

See "Grounding the DC System" on page 3-7.

#### Single Inverter/Charger DC Connections

To connect the Conext XW+ Power Distribution Panel (PDP) to the Conext XW+ Inverter/Charger:

- 1. Connect the positive battery cable (pre-installed in the PDP) to the positive battery terminal at the bottom of the Conext XW+, as shown in Figure 3-23 on page 3-45.
- 2. Connect the negative battery cable (pre-installed in the PDP) to the negative battery terminal at the bottom of the Conext XW+ Inverter/Charger.

**Note:** When making the connections, be sure to observe correct hardware stacking and proper polarity, and ensure that nothing obstructs the connection between the terminal surface and the battery cable lug. (See Figure 3-7 on page 3–12.)

3. Attach the DC terminal covers (included with the Conext XW+ Inverter/ Charger) to the bottom of the Conext XW+ DC terminals.

# To connect the Conext XW+ Power Distribution Panel (PDP) to the Battery Bank:

 Connect your battery cables (not included) to the PDP. Connect the negative battery cable to the DC Negative Bus, and the positive battery cable to the input end of the GJ250A 160 VDC, 3/8" stud DC breaker (pre-installed in the PDP), as shown in Figure 3-23 on page 3-45.

**Note:** To properly attach and torque the positive cable to the DC breaker, you may need to temporarily remove the breaker from the rail.

2. Route your battery cables from the PDP, through your preferred conduit path, to the battery location. Do not connect the cables to the battery yet.

**Note:** Before connecting the DC cables from the PDP to the battery, perform the procedures in "AC Wiring with a Conext XW+ Power Distribution Panel" on page 3–50.

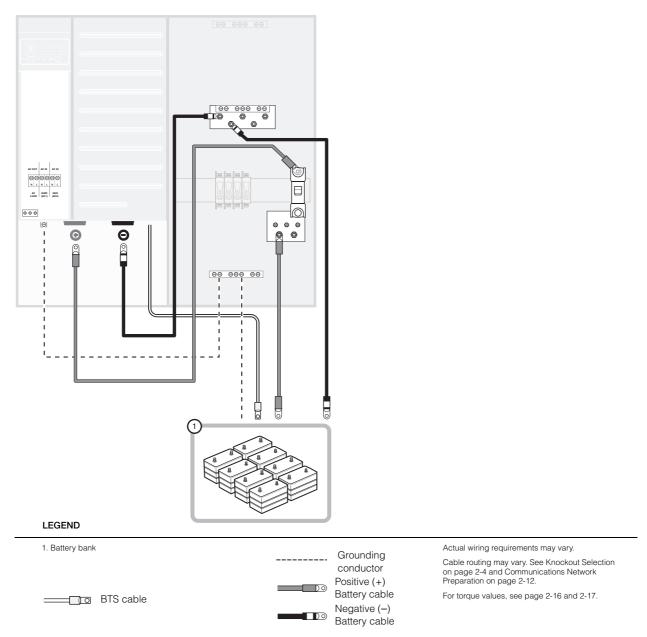


Figure 3-23 DC Connections for a Single-Inverter System with PDP

#### **Dual Inverter/Charger DC Connections**

#### **DC** Grounding

#### **▲ WARNING**

#### **UNGROUNDED EQUIPMENT**

Equipment ground terminals must be reliably connected to ground by appropriately sized grounding conductors. All installations must comply with national and local codes. Consult local and national codes for specific grounding and bonding requirements.

Failure to follow these instructions can result in death or serious injury.

See "Grounding the DC System" on page 3-7.

#### DC positive bus bar installation

- 1. Remove the existing bus bar from the bottom terminal of the GJ250A 160 VDC, 3/8" DC disconnect/breaker (pre-installed in the PDP).
- 2. Install a second GJ250A DC rated breaker (included with the Conext XW+ Connection Kit) next to the existing DC disconnect/breaker.
- 3. Install the DC positive bus bar included with the Conext XW+ Connection Kit. (This DC positive bus bar supports up to three GJ250A DC rated breakers.)
- 4. Remove the appropriate knockout from the Conext XW+ Power Distribution Panel lower faceplate.

Note: Replace faceplates after all AC and DC wiring is complete.

#### DC Wiring for a Dual-Inverter System

- Using the instructions provided in "Single Inverter/Charger DC Connections" on page 3–43, make DC connections from the Conext XW+ Power Distribution Panel to:
  - a) the first Conext XW+ Inverter/Charger (INV1) and
  - b) the battery bank.

**Note:** Before connecting the DC cables from the PDP to the battery, perform the procedures in "AC Wiring with a Conext XW+ Power Distribution Panel" on page 3–50.

- 2. Connect the positive battery cable for INV2 (included with the Conext XW+ Connection Kit) to the top terminal on the second DC disconnect/breaker, as shown in Figure 3-24 on page 3-47.
- 3. Connect the negative battery cable for INV2 (included with the Conext XW+ Connection Kit) to the DC Negative Bus.

4. Connect the positive battery cable to the positive terminal on the second Conext XW+ (INV2) and the negative battery cable to the negative terminal on INV2.

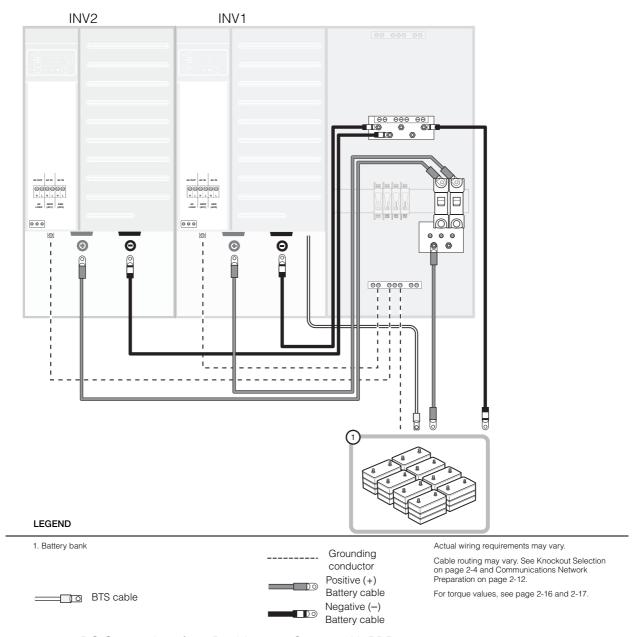


Figure 3-24 DC Connections for a Dual-Inverter System with PDP

#### Triple Inverter/Charger DC Connections

#### **DC** Grounding

#### **AWARNING**

#### **UNGROUNDED EQUIPMENT**

Equipment ground terminals must be reliably connected to ground by appropriately sized grounding conductors. All installations must comply with national and local codes. Consult local and national codes for specific grounding and bonding requirements.

Failure to follow these instructions can result in death or serious injury.

See "Grounding the DC System" on page 3-7.

#### DC Positive Bus Bar installation

- 1. Remove the existing bus bar from the bottom terminal of the GJ250A 160 VDC, 3/8" stud DC disconnect/breaker (pre-installed in the PDP).
- 2. Install a second and third GJ250A DC rated breaker (included with the Conext XW+ Connection Kits) next to the existing DC disconnect/breaker.
- 3. Install the DC positive bus bar included with the Conext XW+ Connection Kit. (This DC positive bus bar supports up to three GJ250A DC rated breakers.)
- 4. Remove the appropriate knockouts from the Conext XW+ Power Distribution Panel lower faceplate.

Note: Replace faceplates after AC and DC wiring is complete.

#### DC Wiring for a Triple-Inverter System

**Note:** One pair of battery cables is included with each Conext XW+ Connection Kit and Conext XW+ Power Distribution Panel.

- Using the instructions provided in "Single Inverter/Charger DC Connections" on page 3–43, make DC connections from the Conext XW+ Power Distribution Panel to:
  - a) the first Conext XW+ Inverter/Charger (INV1) and
  - b) the battery bank.

**Note:** Before connecting the DC cables from the PDP to the battery, perform the procedures in "AC Wiring with a Conext XW+ Power Distribution Panel" on page 3–50.

- 2. Connect the positive battery cable for INV2 (included with the Conext XW+ Connection Kit) to the top terminal on the second DC disconnect/breaker.
- 3. Connect the negative battery cable for INV2 (included with the Conext XW+ Connection Kit) to the DC Negative Bus.
- 4. Connect the positive battery cable to the positive terminal on the second Conext XW+ (INV2) and the negative battery cable to the negative terminal on INV2.

- 5. Connect the positive battery cable for INV3 (included with the Conext XW+ Connection Kit) to the top terminal on the third DC disconnect/breaker.
- 6. Connect the negative battery cable for INV3 (included with the Conext XW+ Connection Kit) to the DC Negative Bus.
- 7. Connect the positive battery cable to the positive terminal on INV3 and the negative battery cable to the negative terminal on INV3.

**Note:** Before connecting the DC cables from the PDP to the battery, perform the procedures in "AC Wiring with a Conext XW+ Power Distribution Panel" on page 3–50.

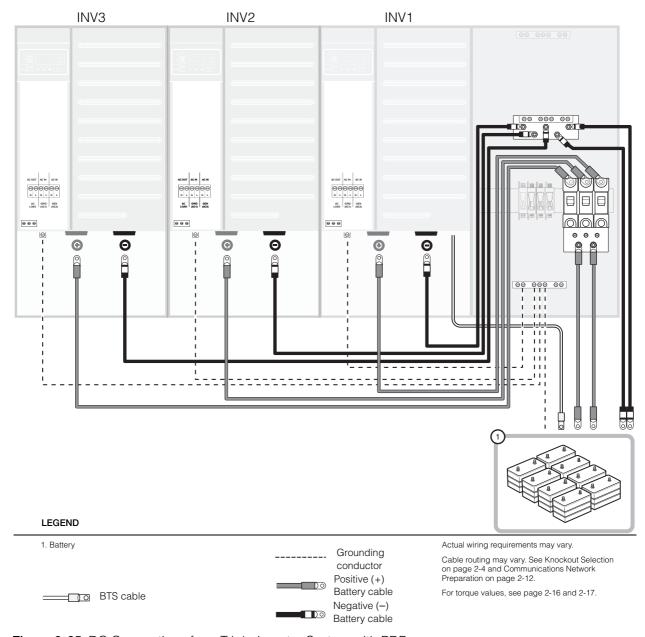


Figure 3-25 DC Connections for a Triple-Inverter System with PDP

#### AC Wiring with a Conext XW+ Power Distribution Panel

#### AC equipment grounding

See "AC Equipment Grounding" on page 3–20.

#### AC breaker installation

The Conext XW+ Power Distribution Panel does not include AC breakers. Mount appropriately sized and rated AC breakers onto the DIN rail inside the Conext XW+ Power Distribution Panel; ensure that your installation is done in accordance with all applicable local installation codes.

**Note:** AC breakers must be mountable on a 35mm "top hat" DIN rail (EN 50022). Depending on your local installation codes, compatible breakers may be available from Schneider Electric (e.g. Acti 9 Miniature Circuit Breakers). For more information, contact your local Schneider Electric Sales Representative.

**Note:** AC breaker installation may vary. Ensure that your installation is done in accordance with all applicable local installation codes. For more information, contact your local Schneider Electric Sales Representative.

#### AC Wiring with a PDP

An inverter load sub-panel and AC conduit must be installed before your Conext XW+ installation can be completed. For more information, see "AC wiring the Conext XW+ Inverter/Charger to the Inverter Load Sub-Panel" on page 3–22.


#### Wiring

Wiring for connections between the PDP and the inverter load sub-panel is not included. See "Torque Values" on page 2–16 for torque requirements.

To connect the Conext XW+ Power Distribution Panel to the Conext XW+ Inverter/Charger(s):

**Note:** The instructions below are general guidelines only. AC wiring and AC breaker installation may vary. Consult your system designer or qualified technician for specific installation instructions. For more information, contact your contact your local Schneider Electric Sales Representative.

- 1. Connect neutral wiring from the Conext XW+ Inverter/Charger neutral (N) terminal to the neutral bus bar on the PDP.
- 2. Connect the Line (L) wire from each GRID breaker to the corresponding AC Input (AC1) on the Conext XW+ unit.
- 3. Connect the L wire from each LOADS breaker to the corresponding AC OUT terminal on the Conext XW+ unit.
- Connect ground wiring from the ground bus bar on the PDP to the Conext XW+ unit.

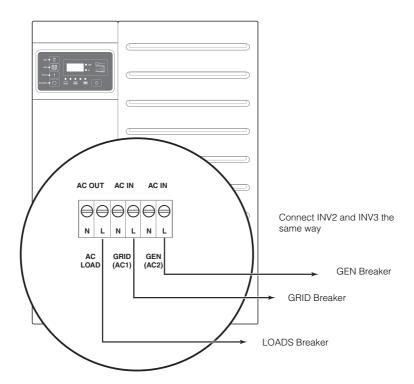

5. Repeat steps 1 through 4 for INV2 and INV3, as necessary.

Figure 3-26 Inverter/Charger Three-Phase AC Wiring

**Note:** Neutral inputs are connected to each other, requiring only one neutral connection when installed with a Conext XW+ Power Distribution Panel. Without the PDP, additional neutral connections may be required at the input sources

- 6. Connect the LOADS breaker(s) to the AC LOADS panel.
- 7. Connect the GRID breaker to the utility grid distribution panel.
- 8. If the installation includes a generator or second AC source, connect the L AC wiring from each pole on the GEN breaker to the corresponding AC Input (AC2) terminal on each Conext XW+ unit.
- 9. Using the labels included with the PDP, re-label the AC breakers, as appropriate.
- Install a bypass interlock plate or external bypass switch, as appropriate. For more information, contact your contact your local Schneider Electric Sales Representative.

•THIS PAGE INTENTIONALLY BLANK•

4

# Xanbus Network Installation

Chapter 4, "Xanbus Network Installation" provides detailed information for planning and installing the components necessary for network communication on a Xanbus system.

Topics in this chapter include:

- "The Xanbus Network" on page 4–2
- "Installing the Network" on page 4-4

#### The Xanbus Network

A Xanbus network is a collection of Xanbus enabled devices that perform individual functions, but also communicate and interact with other devices on the network. The network capability of the Conext XW+ provides a solution that simplifies and automates the installation, configuration, control, monitoring, and integration of devices.

#### **Network Components**

#### **NOTICE**

#### SHORT CIRCUIT OF NETWORK COMPONENTS

- This network is not an ethernet system. Only connect Xanbus-enabled devices to other Xanbus-enabled devices. Do not attempt to connect Xanbus-enabled devices to other networks or systems.
- Ethernet crossover cables are not compatible with the Xanbus system. Use Category 5 (CAT 5 or CAT 5e) cables to connect Xanbus-enabled devices.
- Do not install network terminators in an AC Sync port.

Failure to follow these instructions can result in damage to equipment.

A Xanbus network consists of three elements: Xanbus-enabled devices, Xanbus power supply, and Xanbus cables.

Each device is integrated into the network using cables, network connectors, and terminators. An example of a network system is shown in Figure 4-1.

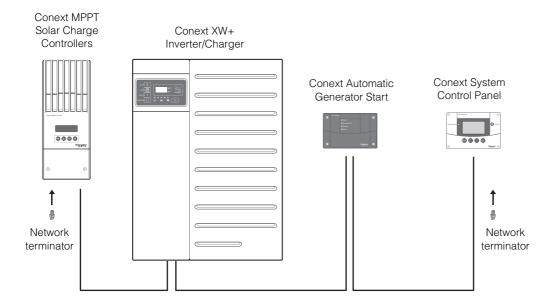


Figure 4-1 Xanbus Network System (Example)

#### Xanbus-enabled devices

A Xanbus-enabled device is any product that works on a Xanbus network. Below are some examples of Xanbus-enabled devices:

- Conext System Control Panel
- Conext XW+ Inverter/Charger
- Conext Automatic Generator Start
- Conext Battery Monitor
- MPPT 60 150 Solar Charge Controller
- MPPT 80 600 Solar Charge Controller

Due to network traffic, the maximum number of Conext XW+ units in a single Xanbus network should not exceed twelve. The maximum number of Conext MPPT Solar Charge Controllers in a single Xanbus network should not exceed twelve.

The combined maximum number of Conext XW+ units and Conext MPPT Solar Charge Controllers should not exceed twelve.

#### Xanbus power supply

Xanbus-enabled devices are either power-supplying or power-consuming. The Xanbus network needs at least one device with a power supply sufficient to run the entire network.

**Note:** The total network current supplied by the power-sourcing devices must be equal to or greater than the total current drawn by the power-consuming devices. The power supply must be capable of providing 15 VDC/200 mA to each device.

For example, in a system with an Conext XW+ Inverter/Charger, Conext System Control Panel, and Conext Automatic Generator Start, the Conext XW+ is a power-supplying device capable of providing 800 mA at 15 VDC while the two other devices each consume a maximum of 200 mA for a total maximum consumption of 400 mA. In this example, the network is properly configured from a power perspective because the power source is capable of providing more current than is needed: 800 mA > 400 mA.

**Note:** See the specifications for each Xanbus-enabled device to determine how much power each device consumes or supplies.

#### Xanbus cables

Each Xanbus-enabled device is connected by a Category 5 (CAT 5 or CAT 5e) cable, a standard cable available from the manufacturer or any computer supply store. The cable consists of eight conductors in four twisted pairs with an RJ45 modular connector wired to the T568A standard. The minimum cable length should be 1.8 m.

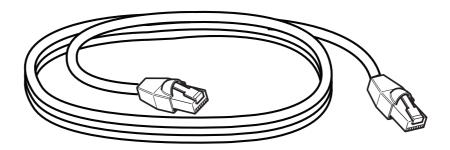


Figure 4-2 Xanbus Cable

#### **Network terminators**

The Xanbus network must be properly terminated at each end to ensure the communication signal quality on the network.

**Note:** If the network is not properly terminated, signal quality is degraded and performance on the network is reduced. Permanent configuration without terminators is not supported.

The Conext XW+ Inverter/Charger and other Xanbus-enabled devices ship with one network terminator. Depending on your network layout, this terminator may need to be removed from the XW+ Inverter/Charger and inserted into another device elsewhere in the network.



Figure 4-3 Network terminator

## Installing the Network

**Note:** Installing and replacing Xanbus-enabled devices in an existing system must be performed with the Conext XW+ Inverter/Charger in standby mode. For more information about standby mode, see the *Conext System Control Panel Owner's Guide*.

### Before You Begin the Installation

- Read the entire section before installing the network. It is important to plan the installation from beginning to end.
- Assemble all the tools and materials required for the installation.

4–4 975-0714-01-01

#### Installation Tools and Materials

**Tools** A Phillips head screwdriver, appropriately sized is required to install the Xanbus

cables.

**Materials** The following materials may be required to complete the installation.

☐ CAT 5 or CAT 5e cables (available from computer supply stores)

Terminators

Note: Mount cables and network connectors in a dry location.

#### Installing AC sync and Xanbus cables

The AC sync cable connects each inverter and provides the necessary communication and control between multiple units. Install these cables, routing them through the Conext XW+ Conduit Box raceway, prior to making the AC and DC wiring connections.

**Note:** If you are installing a Xanbus-enabled device on an existing Xanbus system, put the system in standby mode using the System Settings menu on the Conext System Control Panel.

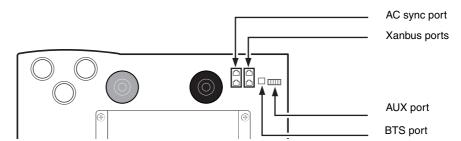


Figure 4-4 Conext XW+ Inverter/Charger communication ports

#### To install the AC sync and Xanbus cables:

1. Remove the two raceways for the communication cabling by removing the screw holding each raceway in place, as shown in Figure 4-5.

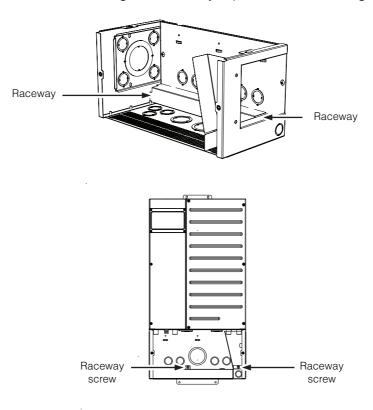


Figure 4-5 XW+ Conduit Box raceways

- 2. Insert the RJ45 jack on the cable into one of the two AC Sync ports.
- 3. Route the cable as shown in Figure 4-6. Route any additional communication cables through the raceways. Replace the wiring raceways, ensuring not to pinch the cables. Secure the raceways to the Conduit Box with the screw that was removed earlier.

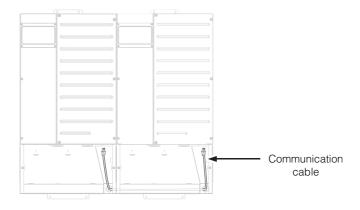


Figure 4-6 Installing the AC sync and Xanbus cables

4–6 975-0714-01-01

**Note:** In a dual-inverter system, install an AC Sync Cable from INV1 to INV2. In a triple-inverter system, daisy-chain an AC Sync Cable from INV1 to INV2 and from INV2 to INV3.

#### **Guidelines for Routing the Xanbus Cables**

#### **AWARNING**

#### XANBUS SHOCK HAZARD

Xanbus cables in contact with DC or AC power can transmit an electric shock. Do not route the Xanbus cables in the same conduit or panel as the AC and DC power cabling.

Failure to follow these instructions can result in death or serious injury.

To ensure maximum performance of your network, follow these guidelines when routing the Xanbus cables.

- Route the cables away from sharp edges that might damage the insulation. Avoid sharp bends in the cable—no less than a 4-inch (100 mm) radius.
- Allow at least 2 ¼ inches (57 mm) of space behind the wall to accommodate the depth of the unit and allow room for the cables to bend.
- Allow for some slack in the cable tension.
- Keep the alignment of wire pairs inside the sheath as straight as possible.
- Allow separation between data and power cables (data cables should only cross over a power cable at right angles).
- Avoid using metal cable staples. Use appropriate hardware fasteners to avoid damage to the cable.
- Support horizontal cables using J hooks or cable trays.

The total length of the network, including all connected Xanbus-enabled devices and the Conext XW+ Inverter/Charger, cannot exceed 130 feet (40 m).

•THIS PAGE INTENTIONALLY BLANK•

# Conext XW+ Inverter/Charger Accessories Installation

Chapter 5, "Conext XW+ Inverter/Charger Accessories Installation" provides detailed instructions for installing certain accessories for your Conext XW+ Inverter/Charger.

Topics in this chapter include:

- "Conext Combox Installation" on page 5-2
- "Conext System Control Panel Installation" on page 5–2

#### **Conext Combox Installation**

The Conext XW+ Inverter/Charger can be controlled remotely by connecting a Conext ComBox.

The Conext ComBox allows access to programming features of the Conext XW+ and allows the system to be modified to specific installation requirements.

For installation instructions, see the *Conext Combox Owner's Guide* (975-0679-01-01).

# **Conext System Control Panel Installation**

The Conext XW+ can be controlled remotely by connecting a Conext System Control Panel (SCP).

The SCP allows access to programming features of the Conext XW+ and allows the system to be modified to specific installation requirements.

The SCP can be connected to the Conext XW+ Inverter/Charger through one of the following two methods:

- via the Xanbus network (see "Installing the SCP via the Xanbus Network" on page 5–3), or
- by replacing the inverter information panel with the SCP (see "Replacing the Inverter Information Panel with the SCP" on page 5–4).

# Installing the SCP via the Xanbus Network

### **WARNING**

#### **IGNITION AND FIRE HAZARD**

This equipment is not ignition protected. To prevent fire or explosion, do not install this product in locations that require ignition-protected equipment. This includes any confined space containing vented batteries, or flammable chemicals such as, natural gas (NG), liquid petroleum gas (LPG) or gasoline (Benzine/Petrol).

- Do not install in a confined space with machinery powered by flammable chemicals, or storage tanks, fittings, or other connections between components of fuel or flammable chemical systems.
- Do not install the inverter near readily flammable materials such as cloth, paper, straw, or plastic sheeting. Keep flammable materials a minimum distance of 600 cm from the top surface and 30 cm from either side surface and the front of the Conext XW+ Inverter/Charger.

Failure to follow these instructions can result in death or serious injury.

The SCP is connected to the Xanbus network via either of the two Xanbus network ports located at the bottom of the Conext XW+ chassis (as shown in Figure 5-1).

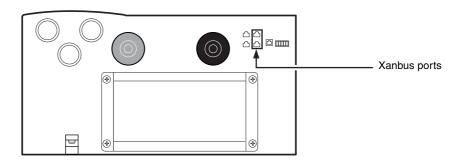


Figure 5-1 Xanbus Port Locations

For more information about installing a Xanbus-enabled device as part of a network system, see Chapter 4, "Xanbus Network Installation".

For wall-mounting and other installation instructions, see the *Conext System Control Panel Owner's Guide* (975-0298-01-01).

975-0714-01-01 5–3

### Replacing the Inverter Information Panel with the SCP

To remove the inverter information panel from the Conext XW+ chassis:

### A A DANGER

### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See EN 50110.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

### **A** A DANGER

### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

# **A** A DANGER

### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable of batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

- 1. If the AC access panel is attached to the Conext XW+ chassis, remove it (as shown in "AC Access Panel Removal" on page 3–2).
- 2. Remove the four screws from the inverter information panel, as shown in Figure 5-2.

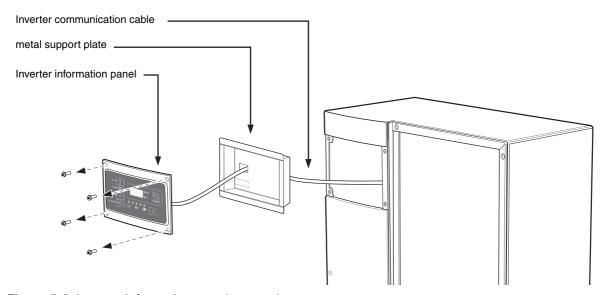


Figure 5-2 Inverter information panel removal

975-0714-01-01 5–5

3. For easier access, remove the right-side panel of the Conext XW+, as shown in Figure 5-3.

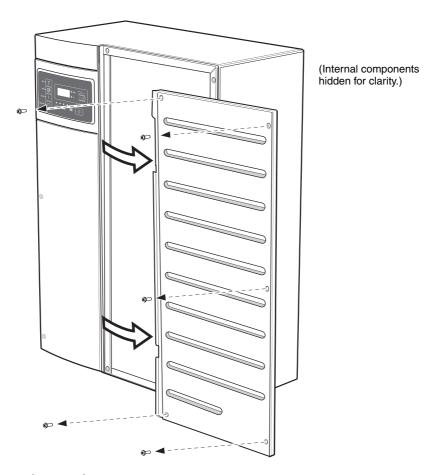


Figure 5-3 Right-side panel removal

- 4. Carefully remove the inverter information panel from the Conext XW+ chassis, and detach it from the inverter communication cable.
- 5. Remove the metal support plate from the housing of the Conext XW+ chassis.
- 6. Unplug the communication cable from the upper communication port

#### To install the SCP into the Conext XW+ chassis:

- 1. Plug the inverter communication cable into the lower communication port
- 2. Carefully place the SCP into the housing of the Conext XW+ chassis.

3. Secure the SCP with the four screws removed from the inverter information panel.

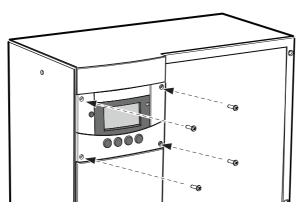


Figure 5-4 Mounting plate centered on wall studs

- 4. When all wiring is complete, re-secure the AC access panel to the Conext XW+ chassis For more information, see "Removing the AC Access Panel and PDP Internal Faceplates" on page 3–2.
- 5. Re-secure the right-side panel (if applicable).

For more information about the Conext System Control Panel, see the *Conext XW+ Inverter/Charger Owner's Guide*.

# Verifying the Installation

If network power (from an inverter/charger) is present, the SCP backlight will illuminate and the startup screen will appear, followed by the system Home screen. For more information, see the *Conext XW+ Inverter/Charger Owner's Guide*.

975-0714-01-01 5–7

•THIS PAGE INTENTIONALLY BLANK•



# Specifications

Appendix A, "Specifications" provides the electrical and mechanical specifications for the Conext XW+ Inverter/Charger.

# **Electrical Specifications**

Table A-1 Conext XW+ Electrical Specifications

	Conext XW+ 8548	Conext XW+ 7048
Continuous Output Power	6,800 W	5,500 W
Surge Rating (Overload for 1 minute)	12,000 W	9,500 W
Surge Rating (Overload for 5 minutes)	11,000 W	9,000 W
Surge Rating (Overload for 30 minutes)	8,500 W	7,000 W
Surge Current	53 A <sub>rms</sub> (60 s)	40 A <sub>rms</sub> (60 s)
Waveform	True Sine Wave	
Idle Consumption—invert mode, no load	28 W 26 W	
Idle Consumption—search mode	< 7 W	
AC Output Voltage	230 Vac ±3%	
AC Input Voltage Range (Bypass/Charge Mode)	165–280 V	
AC Input Breaker	60 A double-pole	
AC Input Frequency Range (Bypass/Charge	45-55 Hz (default) 40-68 Hz (allowable)	
Mode)		
AC Output Continuous Current	29.5 A	24 A
AC Output Frequency	50.0 ±0.1 Hz	
Total Harmonic Distortion	< 5% at rated power	
Automatic Transfer Relay Rating	60 A	
Auxiliary Relay Output	0-12 VDC, maximum 250 mA DC	
Peak Efficiency	95.8%	95.8%
DC Input Voltage (Nominal)	48 VDC	48 VDC
DC Input Voltage Range	40-64 VDC	40–64 VDC
Maximum input DC current	180 A	150 A
Continuous Charge Rate at Nominal Voltage	140 A	110 A
Power Factor Corrected Charging	PF (0.98)	

# Conext XW+ Overload Capability

Loads connected to the inverter are seldom constant, and large loads are often operated for short periods. To accommodate larger loads, the Conext XW+ can temporarily exceed its continuous output power rating. The graphs below illustrate approximate operation time versus load.

Inverter operation time during overload is limited by both inverter internal temperature protection and by the product of AC output current and elapsed time.

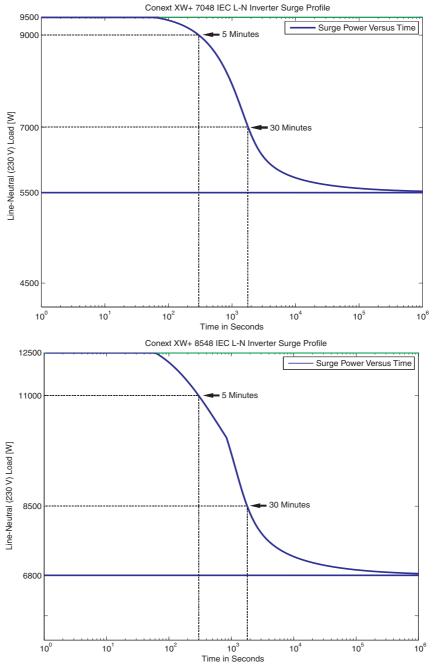


Figure A-1 Conext XW+ AC Overload Capability

975-0714-01-01 A-3

# **Output Power Versus Ambient Temperature**

When the internal temperature of the Conext XW+ exceeds a preset limit, it begins to limit output power automatically to stop maximum internal temperatures from being exceeded.


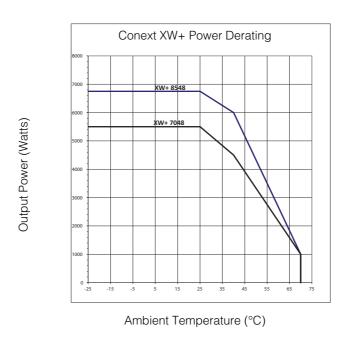


Figure A-2 Output Power Versus Ambient Temperature

# Conext XW+ Efficiency

### **Inverting Efficiency (Typical)**

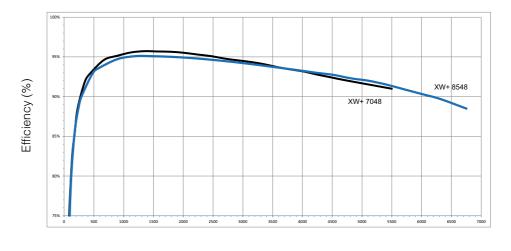


Output Power (Watts)

Figure A-3 Inverting Efficiency (Typical)

A - 4


### **Charging Efficiency (Typical)**

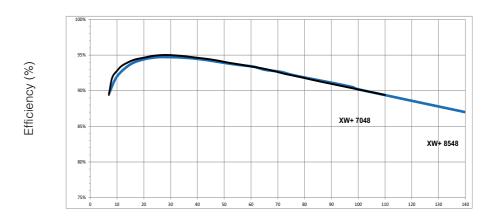

Charge Current (Amps)

Figure A-4 Charging Efficiency (Typical)

### **Charging Efficiency Power Factor**

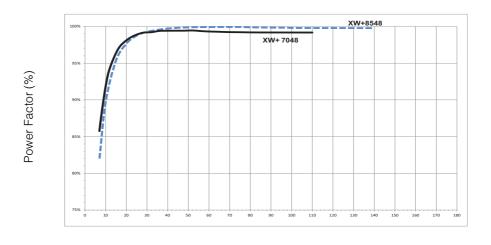

Charge Current (Amps)

Figure A-5 Charging Efficiency Power Factor

975-0714-01-01 A-5

# **Mechanical Specifications**

Table A-2 Conext XW+ Inverter/Charger Mechanical Specifications

	Conext XW+ 8548	Conext XW+ 7048	
Supported Battery Types	Flooded (default), Gel, AGM, Lithium Ion, Custom		
Battery bank size	440–10000 Ah		
Non Volatile Memory	Yes		
Inverter Information Panel	Status LEDs indicate AC In status, faults/ warnings, equalize mode, battery level. Three-character display indicates output power or charge current, fault/warning codes. Startup/shutdown and equalize button.		
System Network	FrameMaker (publish-subscribe network, no need for hubs or special cards)		
Enclosure Type	IP 20, indoor, unheated		
Pollution Degree	PD 2		
Maximum Altitude (operating)	≤ 2000 m		
Overvoltage Category	OVCIII (AC mains), OVCII (DC)		
Rated Temperature Range (meets specifications)	0–25 °C		
Operational Temperature Range	-25–70 °C		
Storage Temperature Range	-40–85 °C		
Inverter Dimensions $(H \times W \times D)$	580 × 410 × 230 mm		
Shipping Dimensions $(H \times W \times D)$	711 × 572 × 394 mm		
Inverter Weight	55.2 kg	53.5 kg	
Shipping Weight	76.9 kg	75 kg	

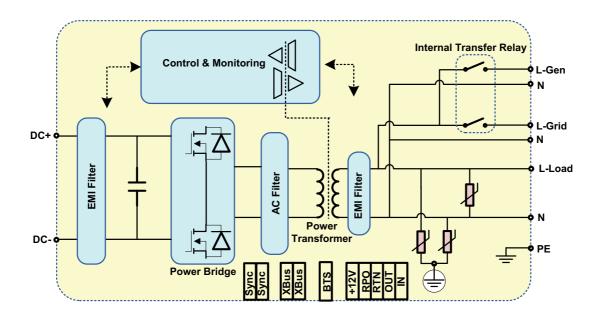


Figure A-6 Conext XW+ Block Diagram

# **Accessories**

Table A-3 Conext XW+ Accessories

Accessory	Part Number
Conext XW+ Power Distribution Panel	865-1015-01
Conext XW+ Power Distribution Panel (Without AC Breakers)	865-1014-01
Conext XW+ Conduit Box	865-1025-01
Conext XW+ Connection Kit for INV2 INV3 PDP	865-1020-02
Conext System Control Panel	865-1050-01
Conext Automatic Generator Start	865-1060-01
Conext MPPT 60 150 Solar Charge Controller	865-1030-1
Conext MPPT 80 600 Solar Charge Controller	865-1032
Conext ComBox	865-1058
Conext Battery Monitor	865-1080-01

# **Regulatory Approvals**

CE marked and complies with the following:

Low Voltage Directive 2014/35/EU, per:

- EN62109-1 Power converters used in photovoltaic systems
- EN62109-2 Particular requirements for Inverters
- EN60529 Degrees of protection by enclosures

EMC Directive 2014/30/EU, per:

- EN61000-6-3 "Emission Standard for Residential, Commercial, and Light-Industrial Environments"
- EN61000-6-1 "Immunity for Residential, Commercial, and Light-Industrial Environments"

RCM marked and complies with the following:

- AS 4777.2: 2015 "Inverter requirements"
- IEC 62109-1: 2010 "General Requirements"
- IEC 62109-2: 2011 "Particular Requirements for Inverters"
- AS/NZS 60335.2.29:2004 + A1&A2 "Particular Requirements for Battery Chargers"
- Registered with the Clean Energy Council

### Schneider Electric

http://solar.schneider-electric.com

As standards, specifications, and designs change from time to time, please ask for confirmation of the information given in this publication.

© 2015 Schneider Electric. All rights reserved.

975-0714-01-01 Rev E Printed in China.